





BTGSBM

Gas Bain-Marie

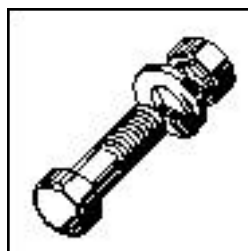

Spare Parts

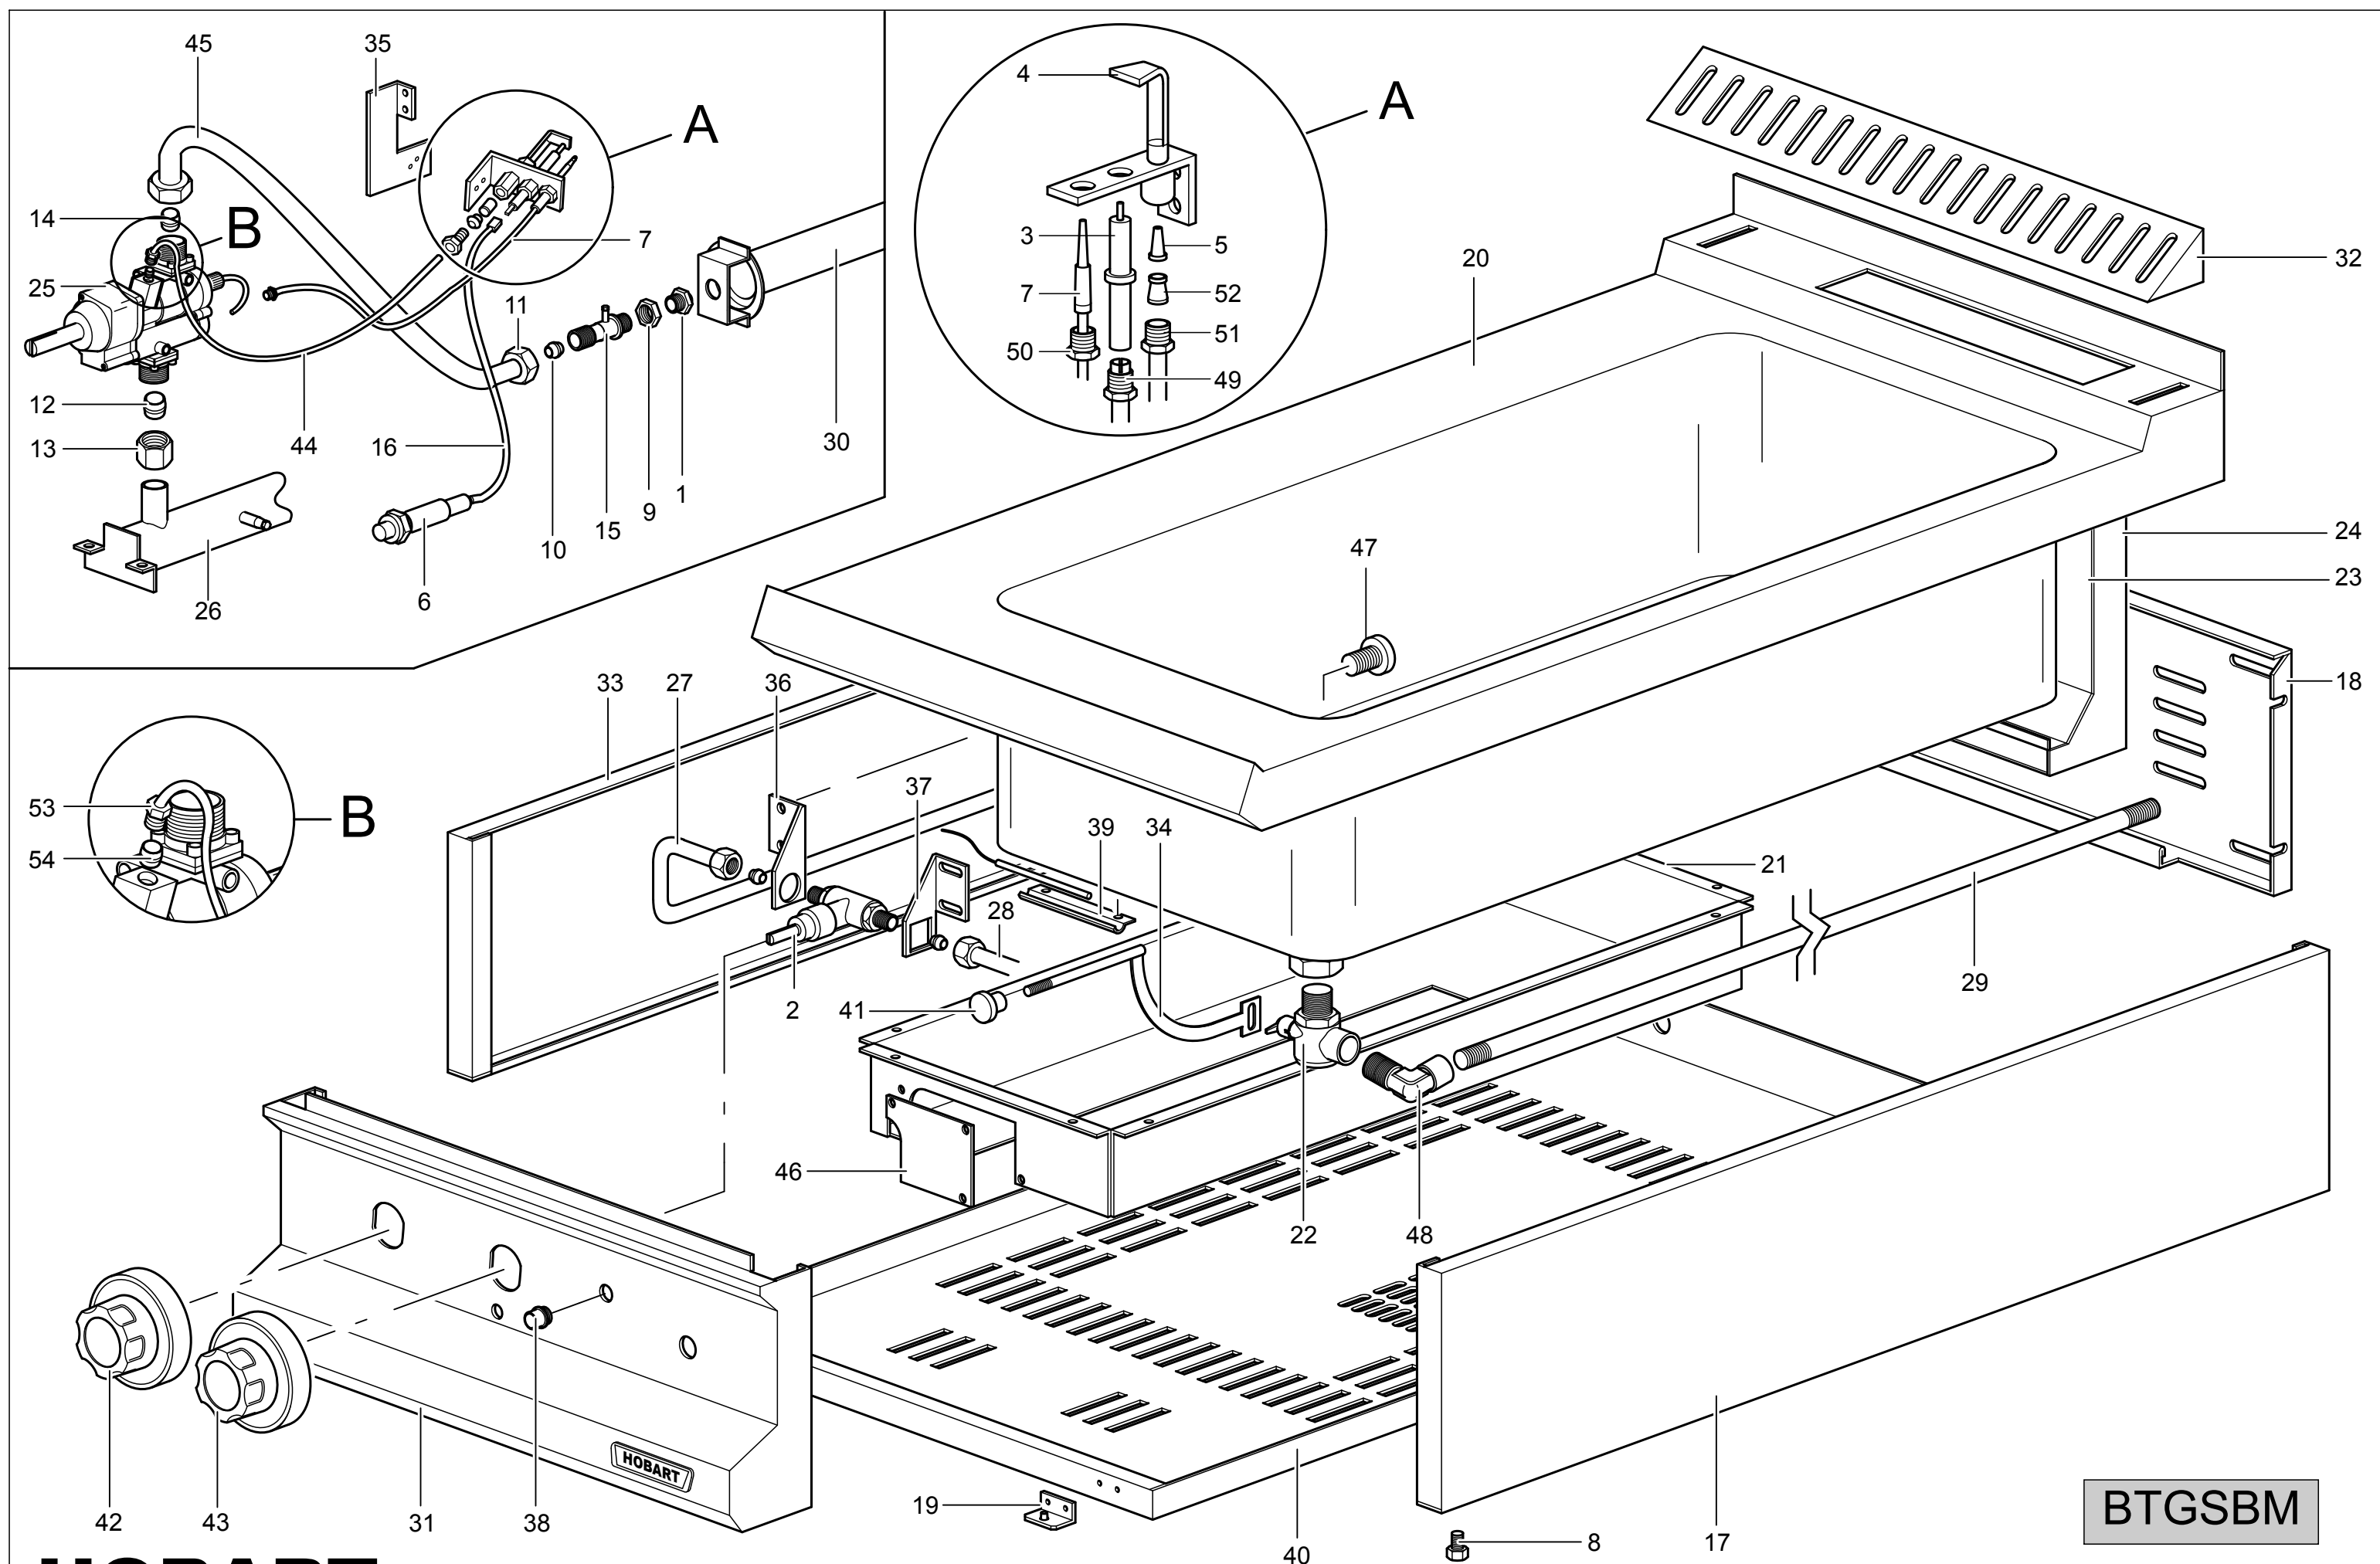

HOBART

BTGSBM
TAV. 914

Key N°	Part N°	Description
1	VEDI MANUALE UGELLI	INIECTOR
2	RTCP700003	WATER TAP
3	RTCP800033 (R)	SPARK PLUG
4	RTCP800034 (R)	PILOT BODY
5	VEDI MANUALE UGELLI	PILOT INJECTOR
6	RTCU700020 (R)	PIEZO LIGHTING
7	RTCU700296	THERMOCOUPLE
8	RTCU700324	FOOT
9	RTCU900005	C/NUT
10	RTCU900012	BICONE Ø10
11	RTCU900013	NUT Ø10
12	RTCU900014	BICONE Ø12
13	RTCU900015	NUT Ø12
14	RTCU900016	BICONE Ø 10
15	RTCU900337	INJECTOR SUPPORT
16	RTCU900384 (R)	LIGHTING CABLE
17	160021	RIGHT SIDE
18	160022	INOX BACK PANEL
19	160028	BRACKET TO FIX CONTROL PANEL
20	163270	TANK
21	160211	COMBUSTION CHAMBER
22	160214	WATER DISCHARGE TAP
23	160216	FLUE FRONT WALL
24	160218	FLUE REAR WALL
25	160220 (R)	GAS THERMOSTAT
26	160221	COLLECTOR
27	160222	WATER TAP FEEDING PIPE
28	160223	WATER FEEDING PIPE
29	160226	WATER DISCHARGE PIPE
30	160239	BURNER GBM49T
31	163191	DASH BOARD
32	163222	CHIMNEY GRILL
33	160319	LEFT SIDE
34	160341	TAP EXTENSION
35	160347	BRACKET TO SUPPORT PILOT
36	160353	LEFT WATER TAP CREW
37	160354	RIGHT WATER TAP CREW
38	160380	ROD GUIDE
39	160399	BULB HOLDER
40	160412	BOTTOM TOP
41	160470	DRAIN KNOB
42	162481+163087 (R)	THERMOSTAT KNOB+RING

(R) = - Recommended spare parts

Key N°	Part N°	Description
43	163114+163079	(R) TAP KNOP+RING
44	160513	BURNER PILOT PIPE
45	160514	FEEDING PIPE FOR BURNER
46	160396	BURNER FIXING BRACKET
47	160224	WATER DISTRIBUTOR
48	RTCU900121	ELBOW
49	RTCU900215	FITTING FOR PILOT SPARK PLUG
50	RTCP800038	NUT FOR THERMOELEMENT
51	RTCU800182	NUT Ø6
52	RTCU800183	BICONE Ø6
53	RTCU900019	NUT Ø6 PEL
54	RTCU900018	BICONE Ø6 PEL

(R) = - Recommended spare parts