



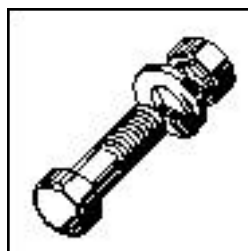

BCG15KD Gas Kettle




Spare Parts

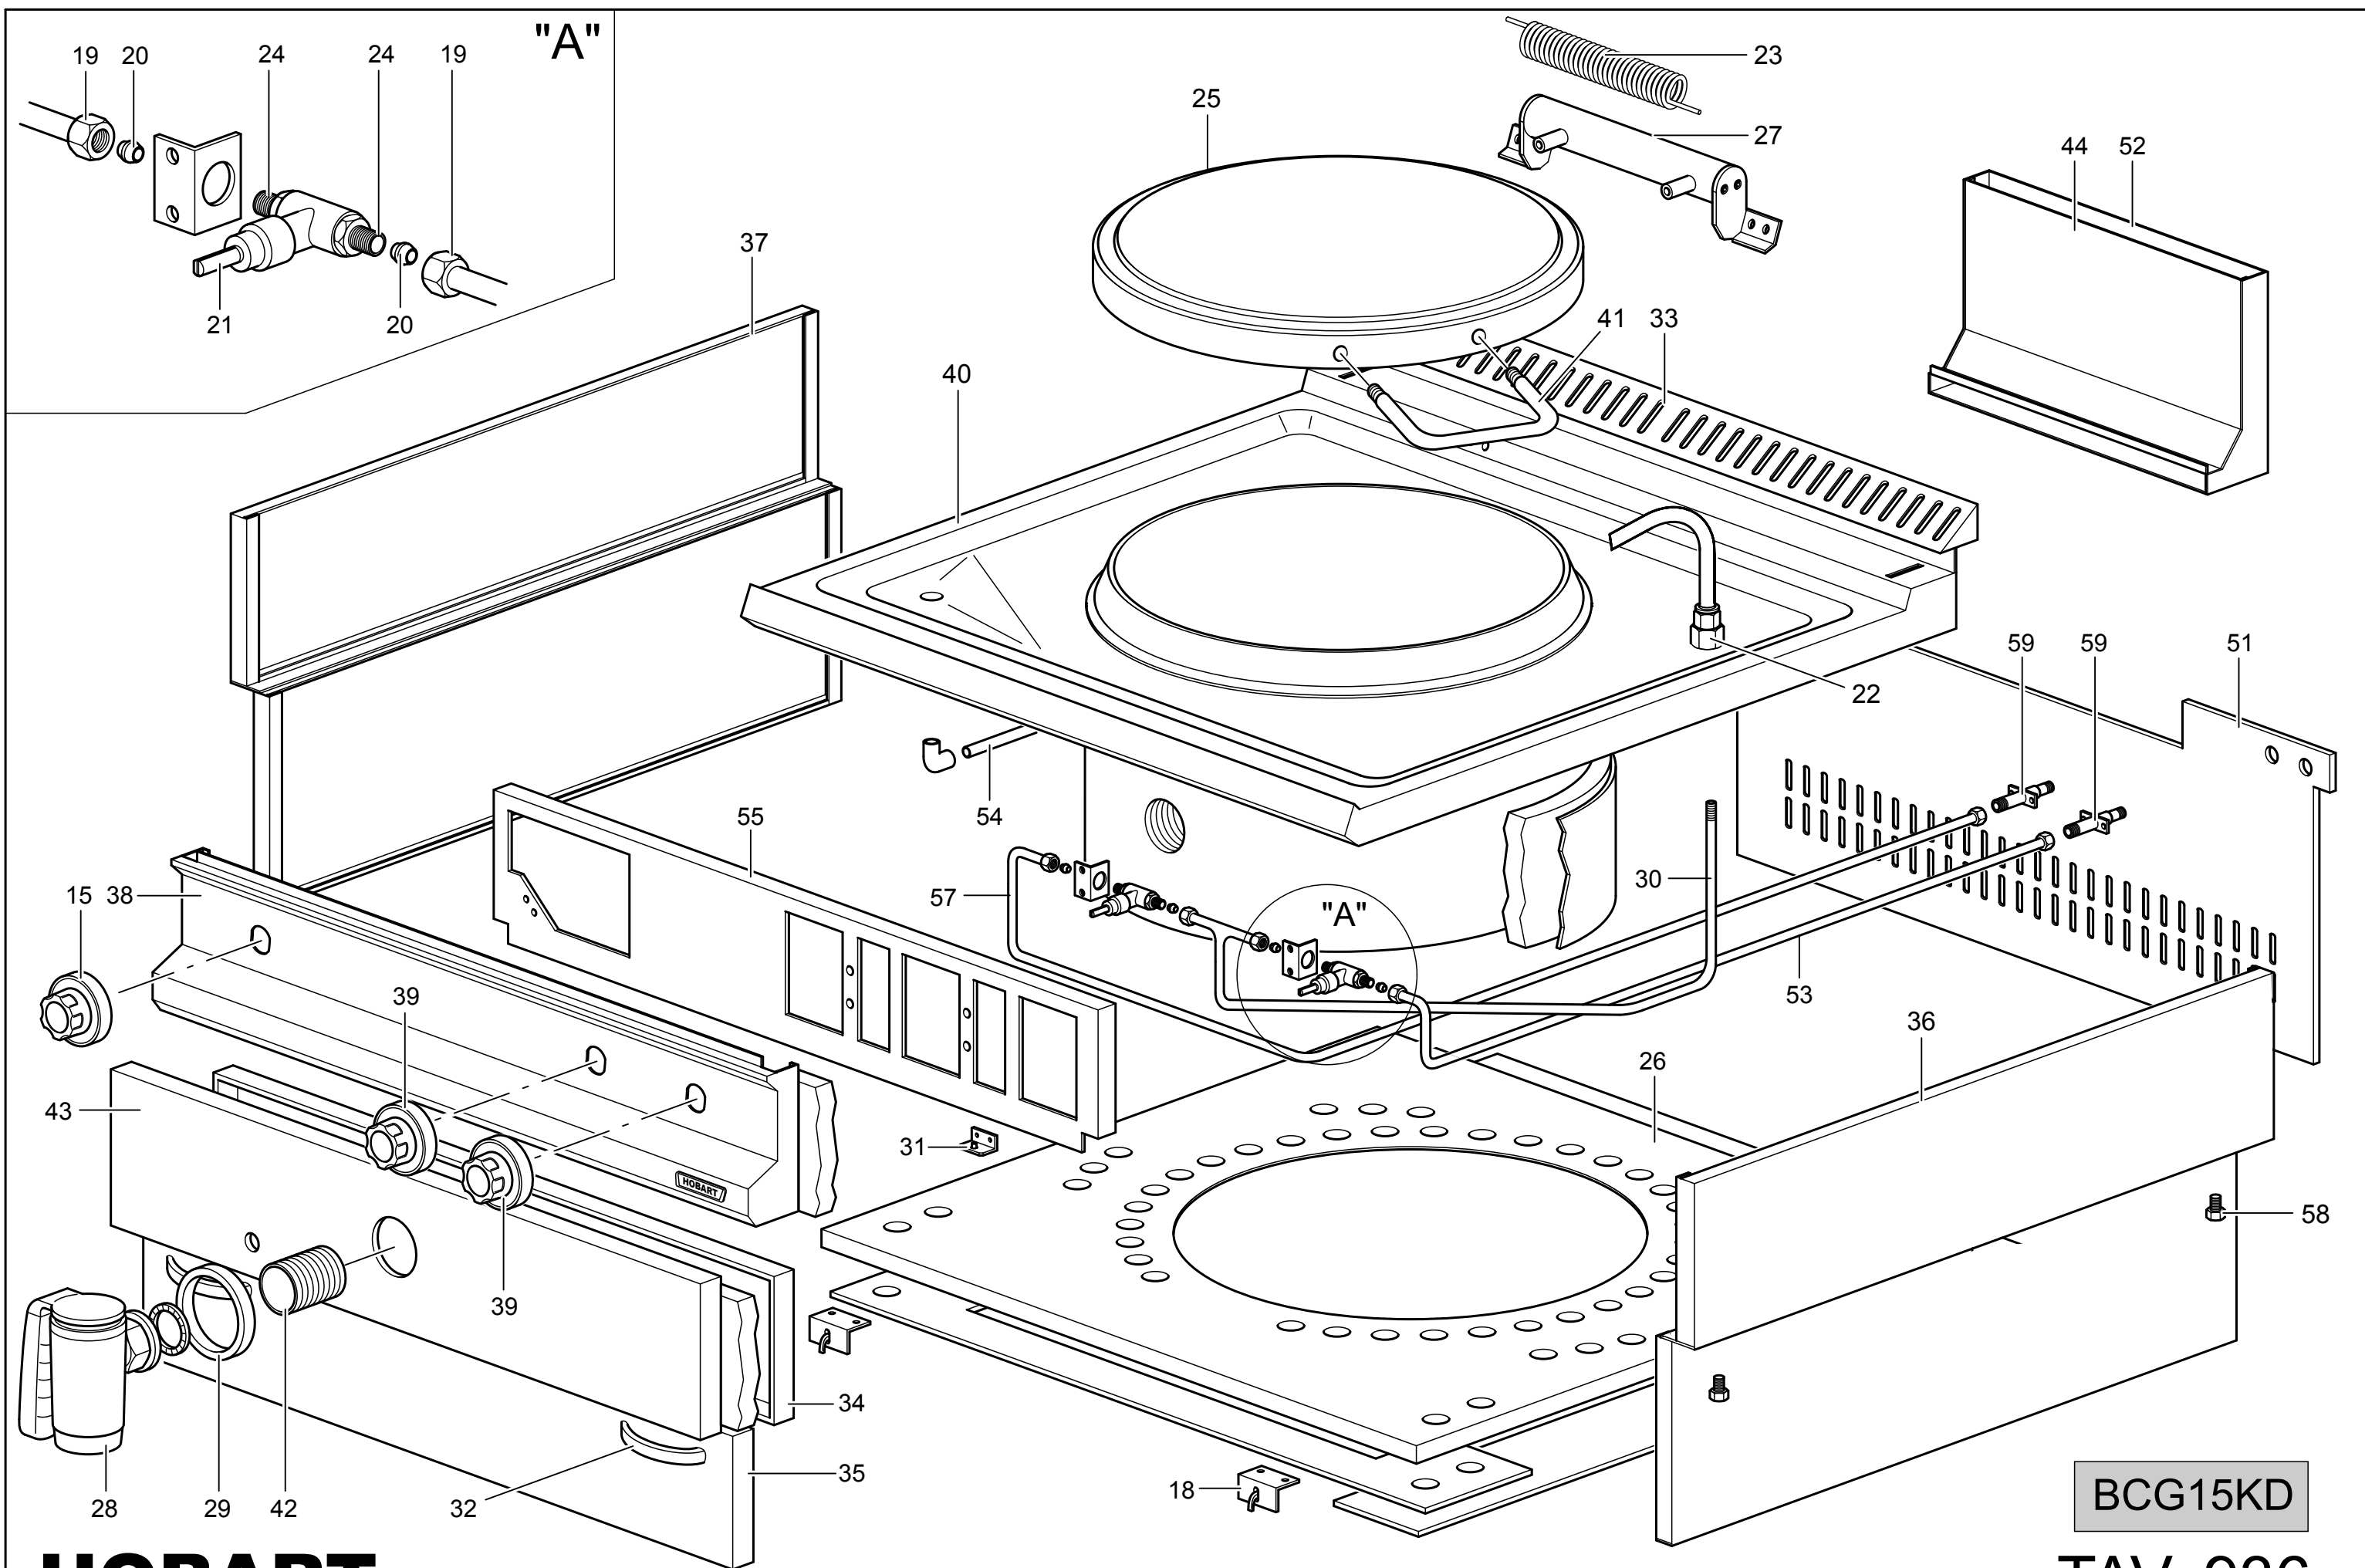

HOBART

BCG15KD

TAV. 936

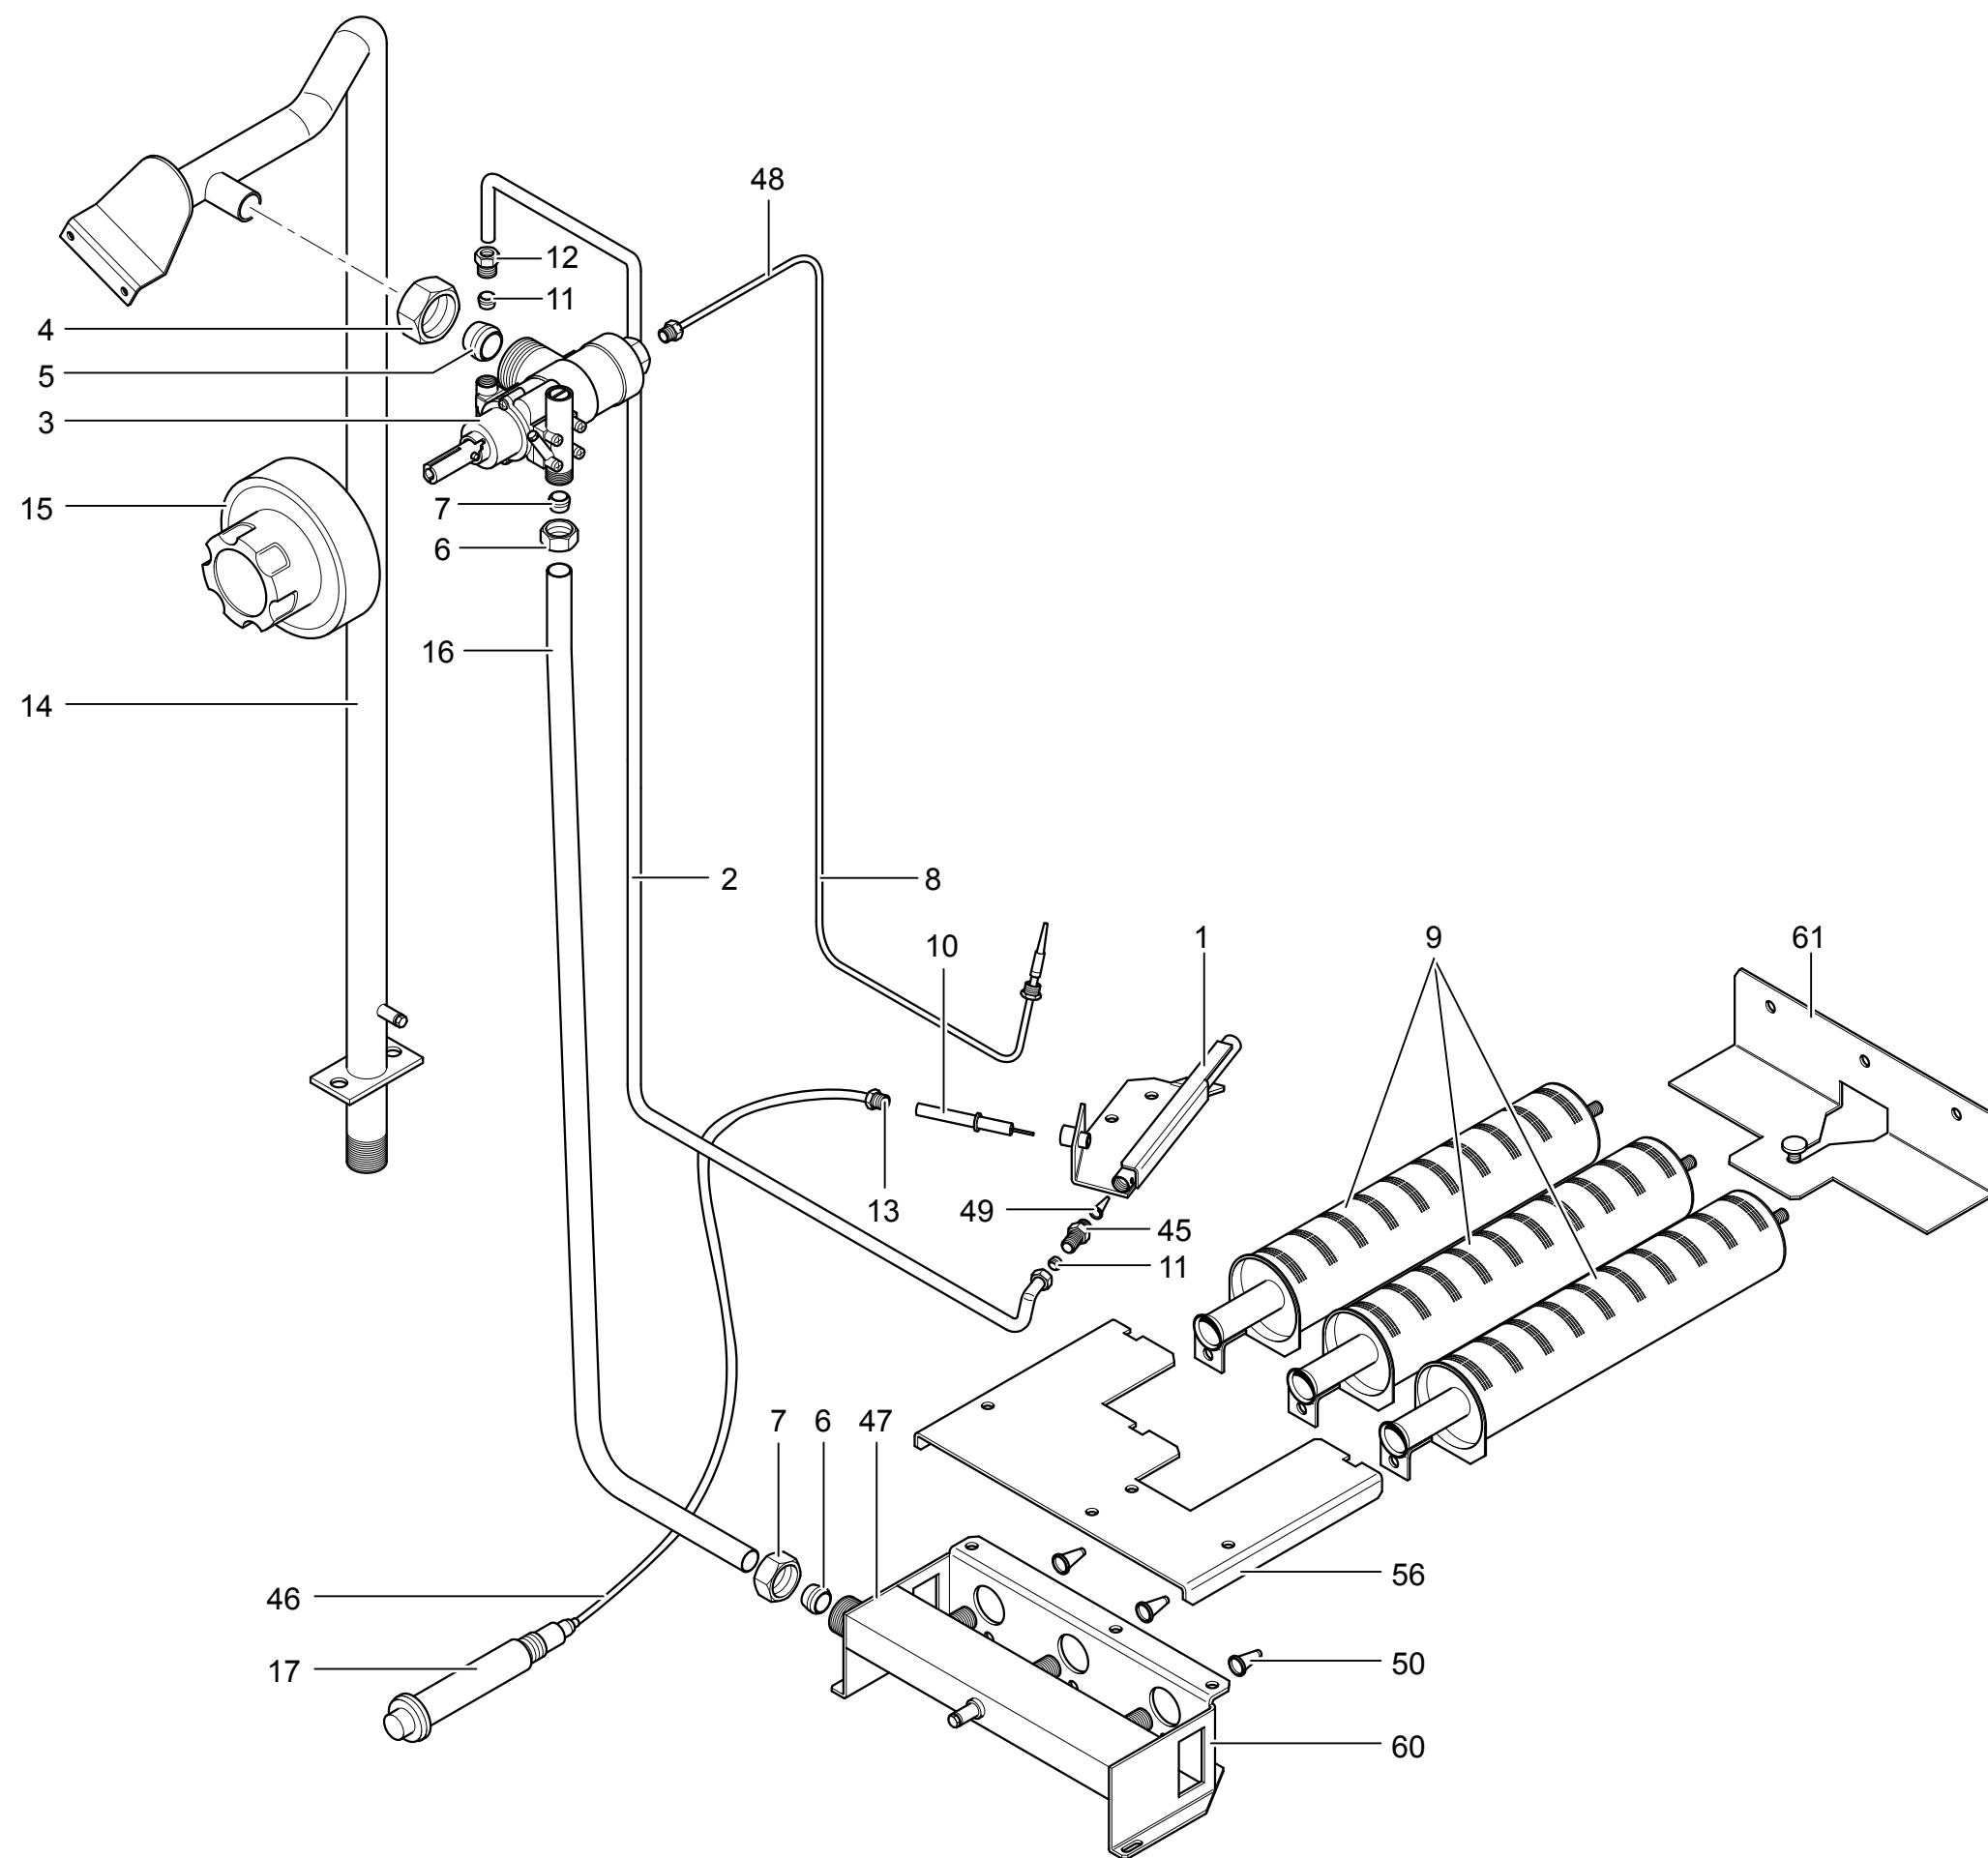

Key N°	Part N°	Description
1	GACP800065	PILOT
2	PACP800212	PILOT PIPE
3	RTCP800019	(R) GAS TAP
4	RTCP800021	NUT FOR TAP D.20
5	RTCP800020	DOUBLE CONE D.20
6	RTCP800022	NUT FOR TAP D.16
7	RTCP800023	DOUBLE CONE D.16
8	RTCU700374	(R) THERMOCOUPLE 60CM
9	RTCU800335	CENTRAL BURNER
10	RTCU900010	(R) ROUND SPARK
11	RTCU900018	DOUBLE CONE D.6
12	RTCU900019	NUT D.6
13	RTCU900215	FITTING FOR PILOT SPARK PLUG
14	160452	RAMP
15	161228+163082	(R) TAP KNOB+RING
16	165634	BURNER FEEDING PIPE
17	RTCU700020	(R) PIEZO IGNITION + NUT
18	RTBF900013	DOOR HINGE
19	RTCU900013	(R) NUT D.10
20	RTCU900012	(R) DOUBLE CONE D.10
21	RTCP700003	WATER TAP
22	RTCP800024	WATER DISTRIBUTOR
23	RTCP800026	HINGE SPRING COVER
24	RTCU900103	(R) NIPLES 3/8"
25	160925	(R) COVER
26	160413	LOWER PLANE
27	160932	COMPLETE HINGE
28	RTCP900004	WATER DISCHARGE TAP
29	RTCP900018	BOSS
30	160940	WATER FEEDING PIPE
31	160028	BRACKET TO FIX THE CONTROL PANEL
32	160270	COVER
33	163221	WORK PLANE GRATE
34	160431	COUNTER DOOR
35	160432	DOOR
36	160741	RIGHT SIDE
37	160740	LEFT SIDE
38	163177	CONTROL PANEL
39	163114+163079	(R) WATER TAP KNOB+RING
39	163114+163085	(R) WATER TAP KNOB+RING
40	164315	BOWL G1509

(R) = - Recommended spare parts

Key N°	Part N°	Description
41	160676	COVER HANDLE
42	160927	NIPLES
43	160675	EXTERNAL FACE G1509
44	160928	INTERNAL CHIMNEY
45	RTCU800339	NUT D.6
46	RTBF700038	LIGHTING CABLE
47	160946	INJECTOR SUPPORT
48	RTCP800131	PROLONGE THERMOCOUPLE
49	VEDI MAN. UGELLI	PILOT INJECTOR
50	VEDI MAN. INIETT.	INJECTOR
51	160890	BACK CROSSBAR
52	160929	INTERNAL CHIMNEY
53	163026	HOT WATER FEEDING PIPE
54	160941	WATER DISCHARGE PIPE
55	160436	FRONT CROSSBAR
56	160458	BURNER PROTECTION
57	163027	COLD WATER FEEDING PIPE
58	RTCU700324	FOOT
59	GACP900023	WATER CONNECTION
60	160946	INJECTOR SUPPORT
61	160457	BRACKET TO FIX BURNER

(R) = - Recommended spare parts