





BCEABP

Electric Bratt Pan

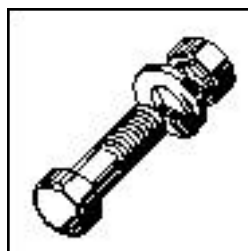

Spare Parts

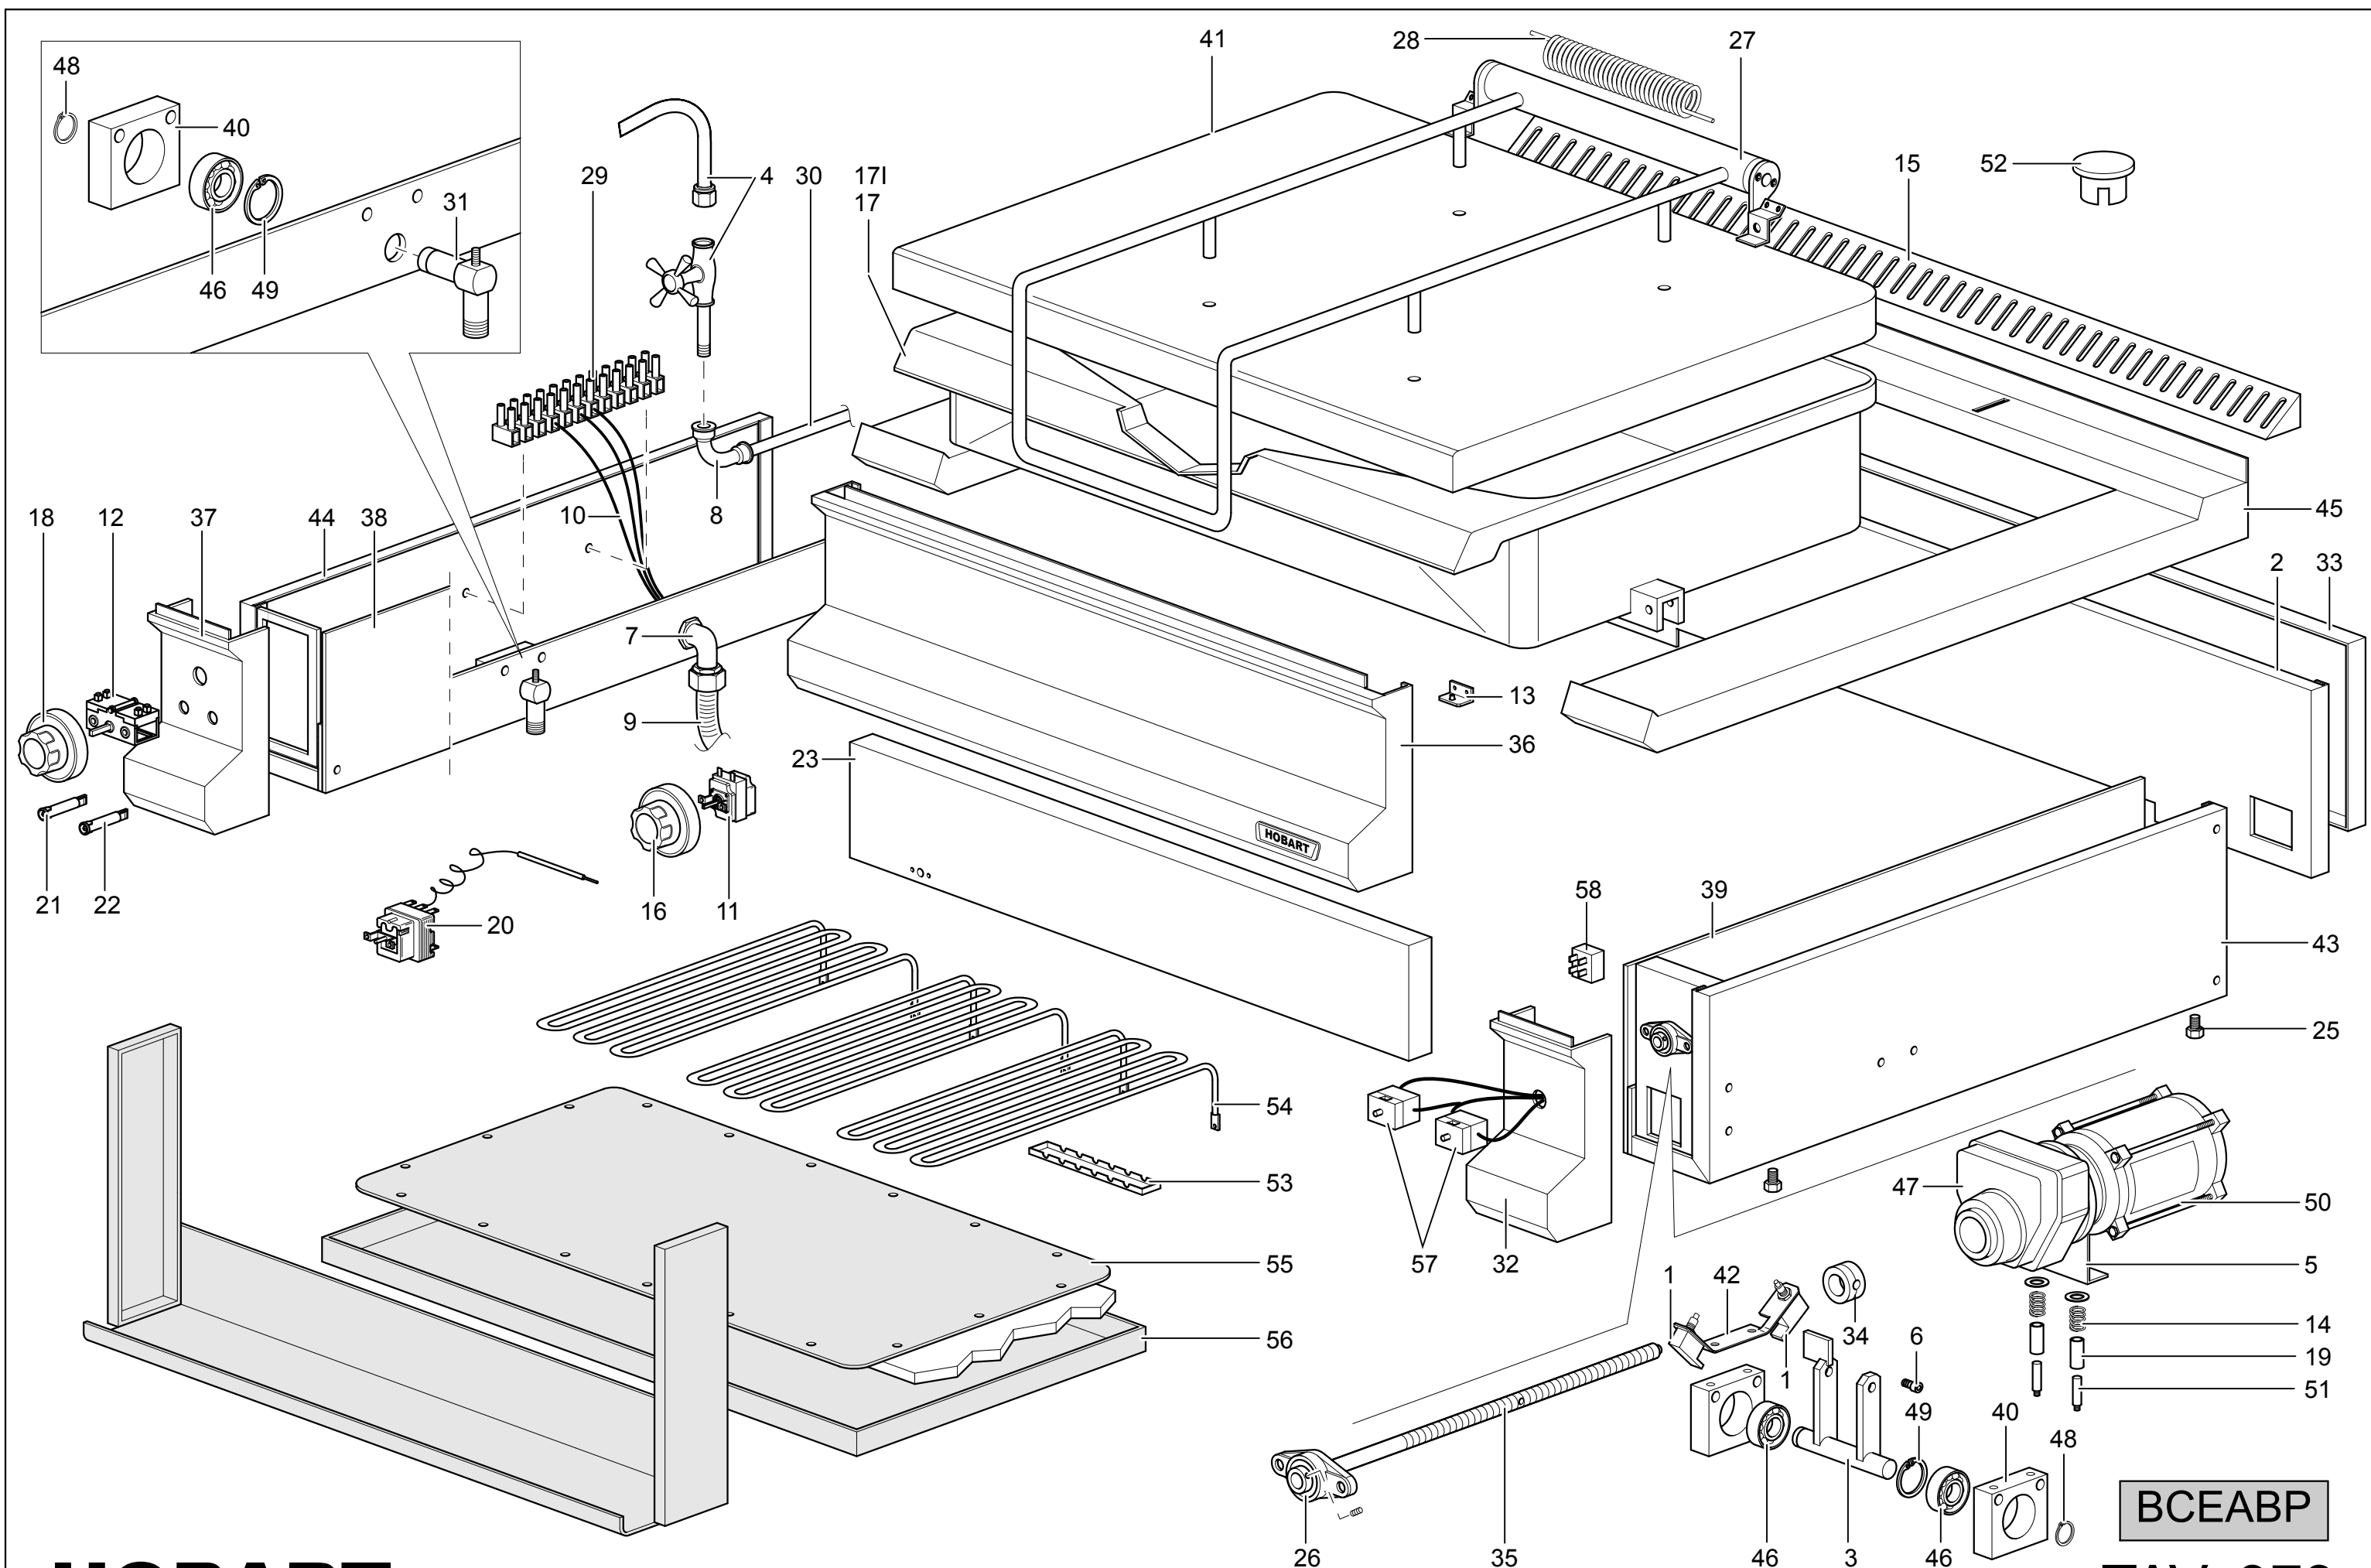

HOBART

BCEABP
TAV. 973

Key N°	Part N°		Description
1	RTBF800113	(R)	MICROSWITCH
2	160629		FRONT CROSSBAR
3	163806	(R)	FITTING DEVICE PLUG
4	RTBF900039		BOWL FEEDING TAP
5	160612		BRACKET
6	165906	(R)	SCREW
7	RTBF800138		CHOCK
8	165888		ELBOW 1/2"
9	MPGUFE0020	(R)	CASE
10	RTCU900422		FEEDING CABLE
11	RTCU700085	(R)	THERMOSTAT
12	RTCU700212	(R)	COMMUTATOR
13	160028		BRACKET TO FIX THE CONTROL PANEL
14	166342		SPRING
15	160286		CHIMMEY GRILL
16	161227+163077	(R)	THERMOSTAT KNOB+RING
17	166216		TANK
17I	166215		COMPOUND TANK
18	161227+163075	(R)	COMMUTATOR KNOB+RING
19	160253		SUPPORT
20	RTBF800192	(R)	LIMIT THERMOSTAT
21	160506		ORANGE WARNING LIGHT
22	160505	(R)	GREEN WARNING LIGHT
23	166224		EXTERNAL FACE
24	164572		CHIMMEY GRILL
25	RTCU700324		FOOT
26	RTCU700504		SUPPORT
27	166120		COMPLETE HINGE
28	RTBF800103		SPRING FOR COVER INGE
29	RTBF900045		TERMINAL BOARD
30	165400		WATER FEEDING PIPE
31	163807		FITTING DEVICE PLUG
32	163208		CONTROL PANEL
33	166297		BACK PANEL
34	160631		NUT SCREW
35	165289		SCREW
36	163203		CENTRAL CONTROL PANEL
37	163188		LEFT CONTROL PANEL
38	160600		LEFT SIDE
39	160601		RIGHT SIDE
40	160516		BALL BEARING SUPPORT

(R) = - Recommended spare parts

Key N°	Part N°	Description
41	160593	COVER
42	160626	BRACKET
43	160660	LEFT SIDE
44	160661	RIGHT SIDE
45	163860	PLANE
46	163799	BALL BEARING
47	165291	REDUCTION UNIT
48	163801	SEEGER Ø 30
49	163802	SEEGER Ø 62
50	165292	MOTOR
51	160259	PIN
52	163603	PLUG
53	166221	ELEMENT FIXING BRACKET
54	166219	(R) ELEMENT 4KW
55	166223	SUPPORT PLAN FOR ELEMENT
56	164597	ELEMENT PROTECTION BOX
57	RTBF800123	PUSH BUTTON
58	RTBF800125	PUSH BUTTON CONTACT

(R) = - Recommended spare parts