




Gas Fryer - double
BCGDF - BMGDF



Spare Parts



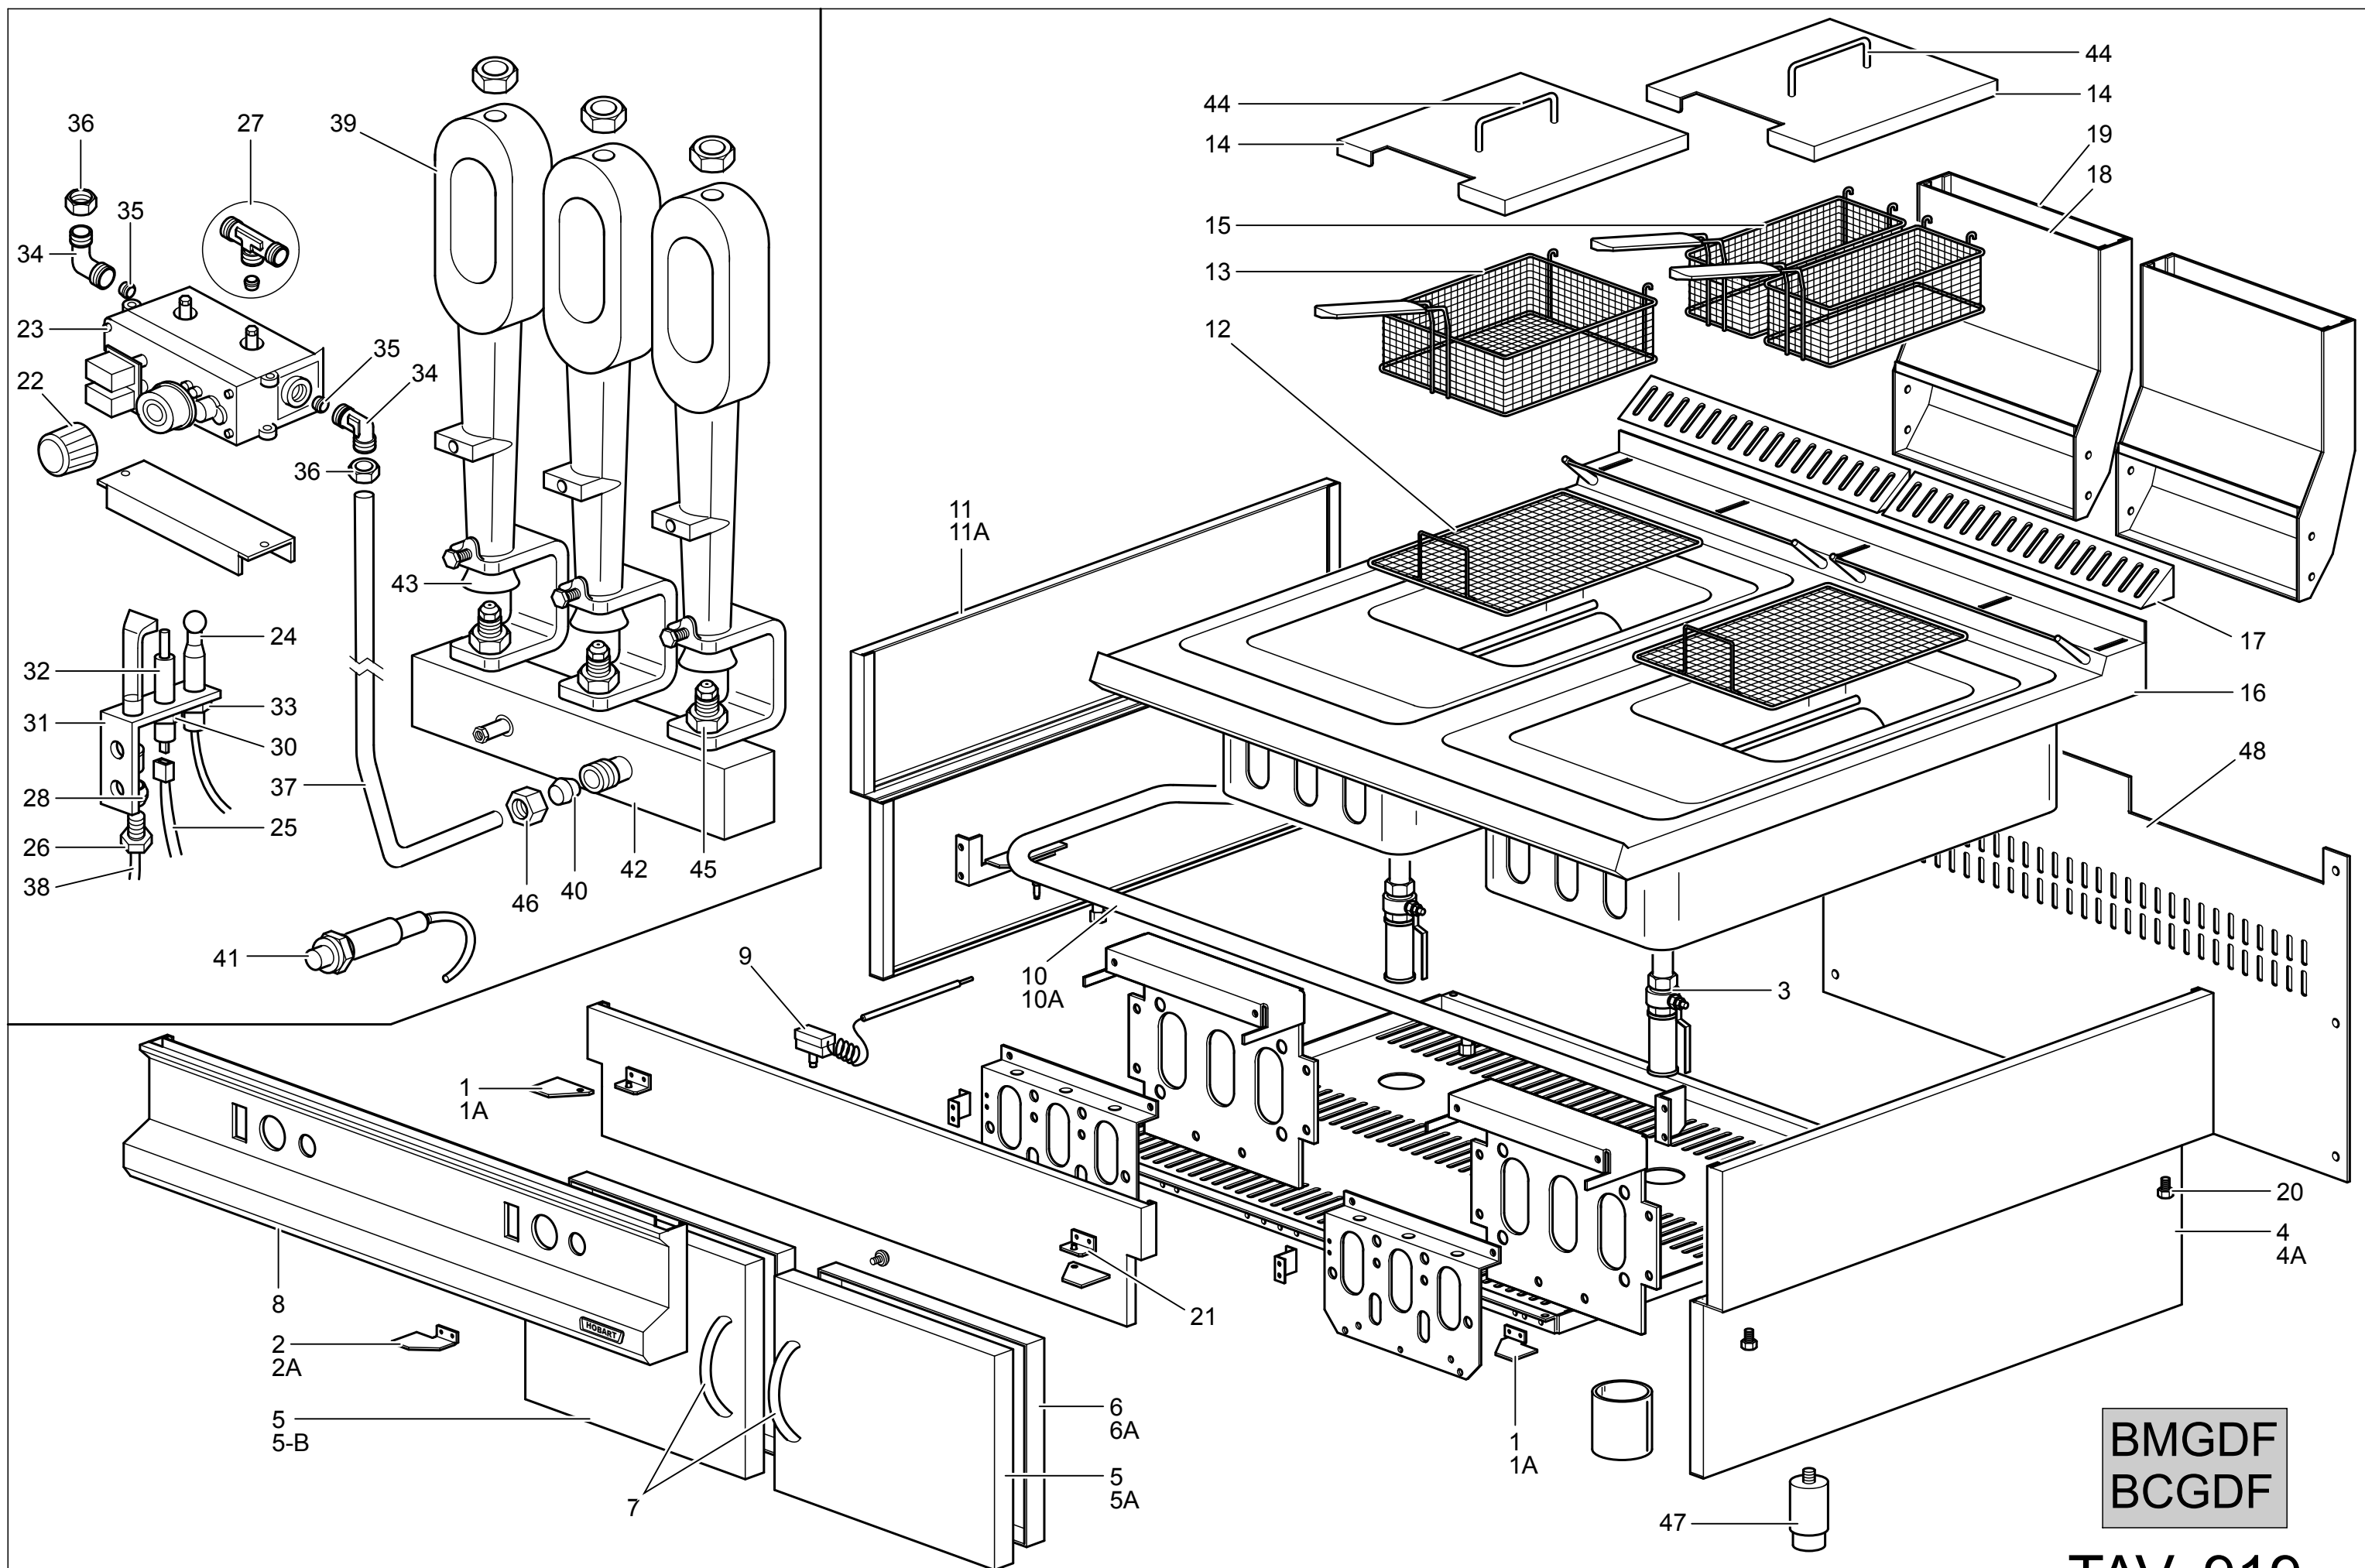

BMGDF
BCGDF


TAV. 919

Key N°	Part N°	Description
1	GACU700113	RIGHT HINGE GC47
1a	162199	FREE STANDING RIGHT HINGE GC47
2	GACU700112	LEFT HINGE
2a	162198	FREE STANDING LEFT HINGE
3	RTBF800073	WATER DISCHARGE TAP
4	160433	RIGHT SIDE
4a	162676	FREE STANDING RIGHT SIDE
5	160096	DOOR
5a	162196	FREE STANDING RIGHT DOOR
5b	162202	FREE STANDING LEFT DOOR
6	160095	COUNTER DOOR
6a	162197	FREE STANDING COUNTER DOOR
7	160270	COVER
7a	160739	FREE STANDING COVER
8	163199	CONTROL PANEL
9	RTBF900094	(R) T. L. T230
10	160091	COLLECTOR
10a	161666	FREE STANDING COLLECTOR
11	160434	LEFT SIDE
11a	162677	FREE STANDING LEFT SIDE
12	160036	GRATE FOR BASKET
13	160038	BASKET
14	160392	TANK COVER
15	160037	BASKET
16	163261	BOWL
17	163221	WORK PLANE GRATE
18	160063	FLUE FRONT WALL
19	160062	FLUE REAR WALL
20	RTCU700324	FOOT
21	160028	BRACKET TO FIX THE CONTROL PANEL
22	RTCU900222	VALVE SAFETY KNOB
23	RTCU700642	(R) VALVE
24	RTCU700652	(R) THERMOCOUPLE
25	RTCU800144	LIGHTING CABLE
26	RTCU900215	FITTING
27	RTCU900217	BICONE + FITTING Ø6
28	RTCU800183	BICONE Ø6
30	RTCU800182	NUT Ø 6
31	RTCP800034	(R) PILOT
32	RTCP800033	(R) ROUND SPARK
33	RTCP800038	FITTING
34	RTCP900066	ELBOW
35	RTBF800137	BICONE Ø14

(R) = - Recommended spare parts

Key N°	Part N°	Description
36	RTBF800015	NUT Ø 14
37	160636	BURNER FEEDING PIPE
38	160637	PILOT PIPE
39	RTCU700575	BURNER
40	RTCP900088	BICONE Ø14
41	RTCU7000020	(R) PIEZO IGNITION + NUT
42	160599	INJACTOR SUPPORT
43	RTCU700584	BURNER AIR SHUTTER
44	RTBF800020	COVER
45	RTCU700750	SUPPORT,INJECTOR
46	RTCP900089	NUT Ø 14
47	162276	FREE STANDING FOOT
48	162680	FREE STANDING BACK PANEL

(R) = - Recommended spare parts

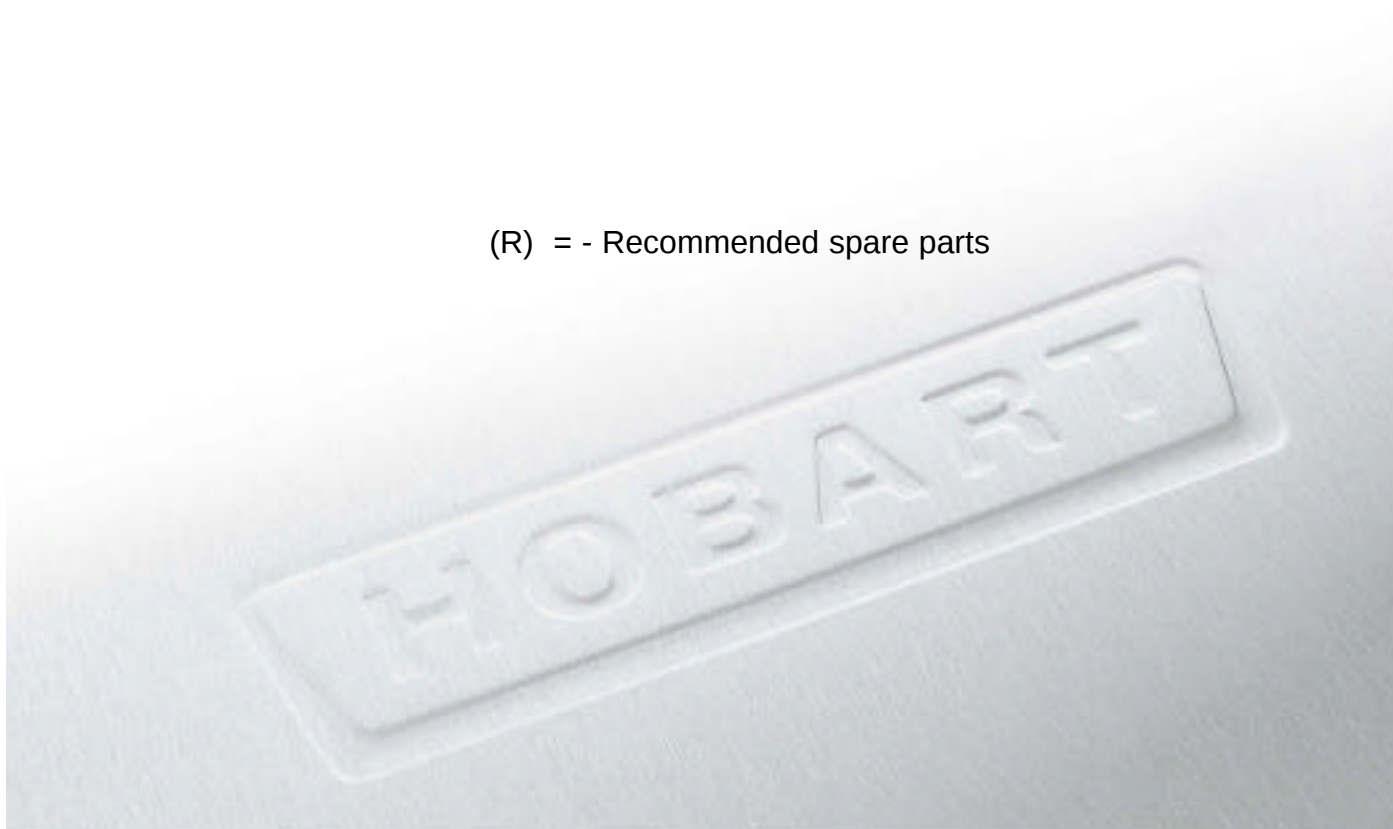



As continued product improvement is a policy of HOBART, specifications are subject to change with-out notice.