



Gas Solid Top
BTGST



Spare Parts



Key N°	Part N°		Description
1	RTCP800034	(R)	PILOT
2	RTCU900474	(R)	THERMOCOUPLE
3	RTCP800038		THERMOCOUPLE FITTING
4	RTCU900215		PILOT SPARK PLUG CONNECTOR
5	RTCP800033	(R)	ROUND SPARK
6	RTCU800182		CAP D. 6
7	RTCU800183		CAP D. 6
8	VEDI MAN.		INJECTOR
9	RTCU900011	(R)	SAFETY VALVE
10	RTCU90018		DOUBLE CONE D. 6
11	RTCU90019		CAP D. 6
14	RTCU900014		BICONE FOR PIPE Ø 12 SAFETY VALVE
15	RTCU900015		NUT Ø 12 SAFETY VALVE
16	160581		PIPE BURNER
17	RTCU800303		BURNER CAP
18	GACU800171		BURNER
19	RTCU700020	(R)	PIEZO LIGHTING
20	RTCU900384		CABLE FOR PIEZO LIGHTING
21	163221		WORK PLANE GRATE
22	RIC0002358		DISK FOR COOKING PLANE
23	160325		COOKING PLANE
24	163292		GASKET
25	163259		WORK PLANE
26	160023		INOX BACK PANEL
27	160021		SIDEPANEL RIGHT
28	RTCU700324		FOOT
29	160024		BOTTOM
30	RTBF900054		SPY- HOLE
31	163067		KNOB
32	163123		OIL COLLECTING DRAWER EXTERNAL PANEL
33	160270		COVER
34	163184		CONTROL PNAEL
36	163122		OIL COLLECTING DRAWER EXTERNAL PANEL
38	160641		FRONT INSULATING PANEL
39	160642		OVEN BOOTOM INSULATING PANEL
40	160319		SIDEPANEL LEFT
41	160462		COLLECTOR
42	160640		LATERAL INSULATING PANEL
43	RTCU900005		INJECTOR SUPPORT LOCK NUT
44	RTCU800195		DOUBLE CONE D. 12
45	RTCU800181		INJECTOR SUPPORT
46	RTCU800181		CAP D. 12
47	RTCU900030		REMOVAL HOOK
48	160580		BURNER PILOT PIPE

(R) = - Recommended spare parts



As continued product improvement is a policy of HOBART, specifications are subject to change with-out notice.