

ERSATZTEILE


Geschirrspüler

54445


DP 50 D

115V 3 60 Hz


Ed. 11/2001

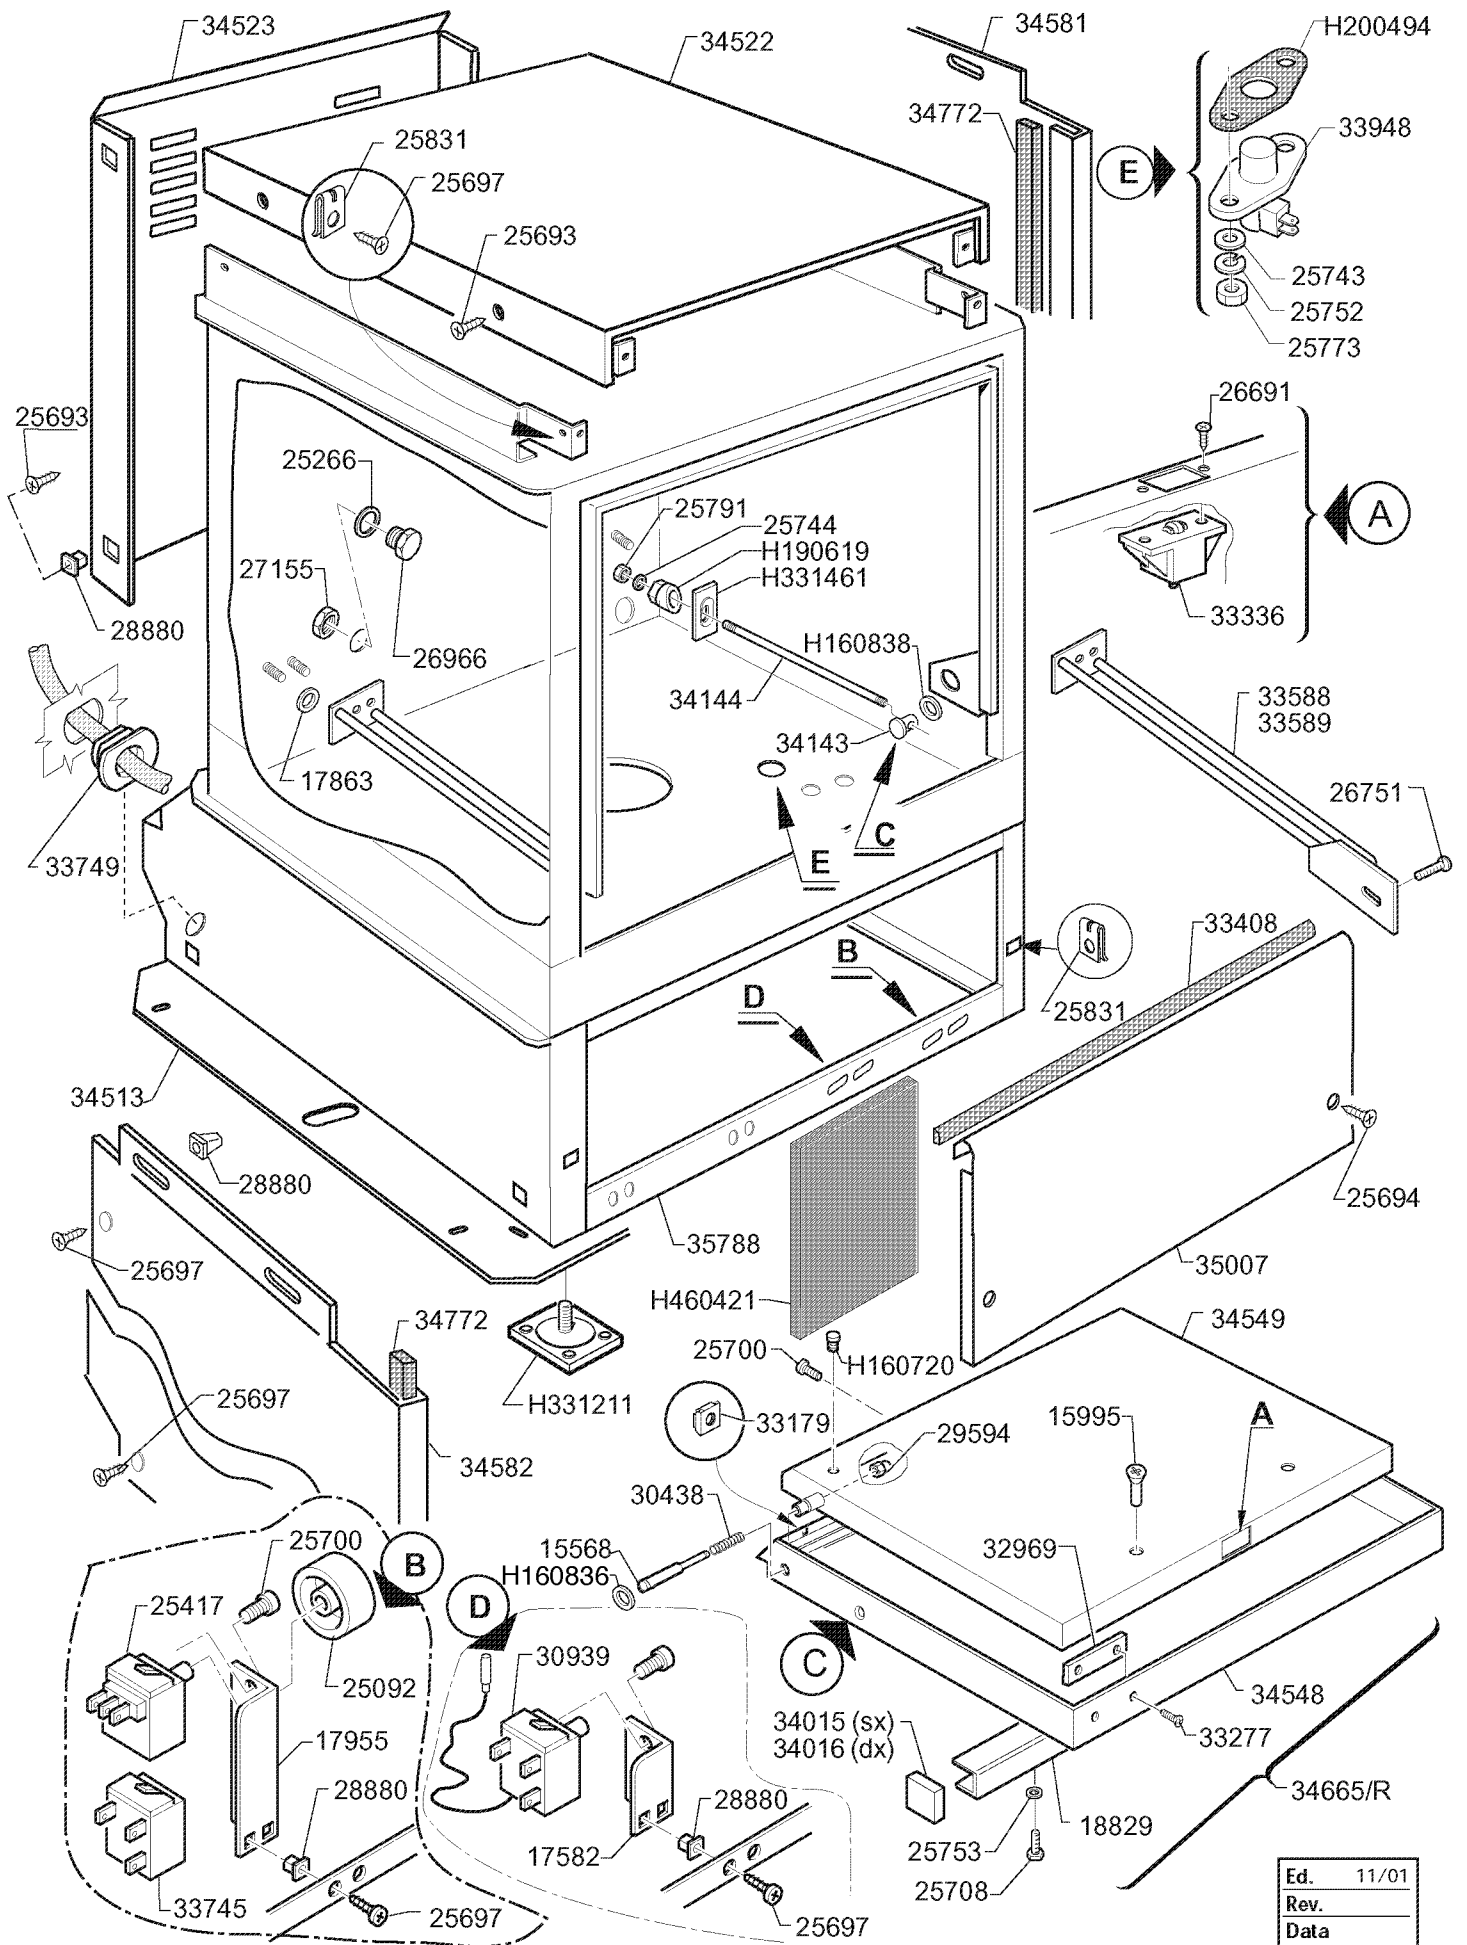


Ed.	11/01
Rev.	
Data	

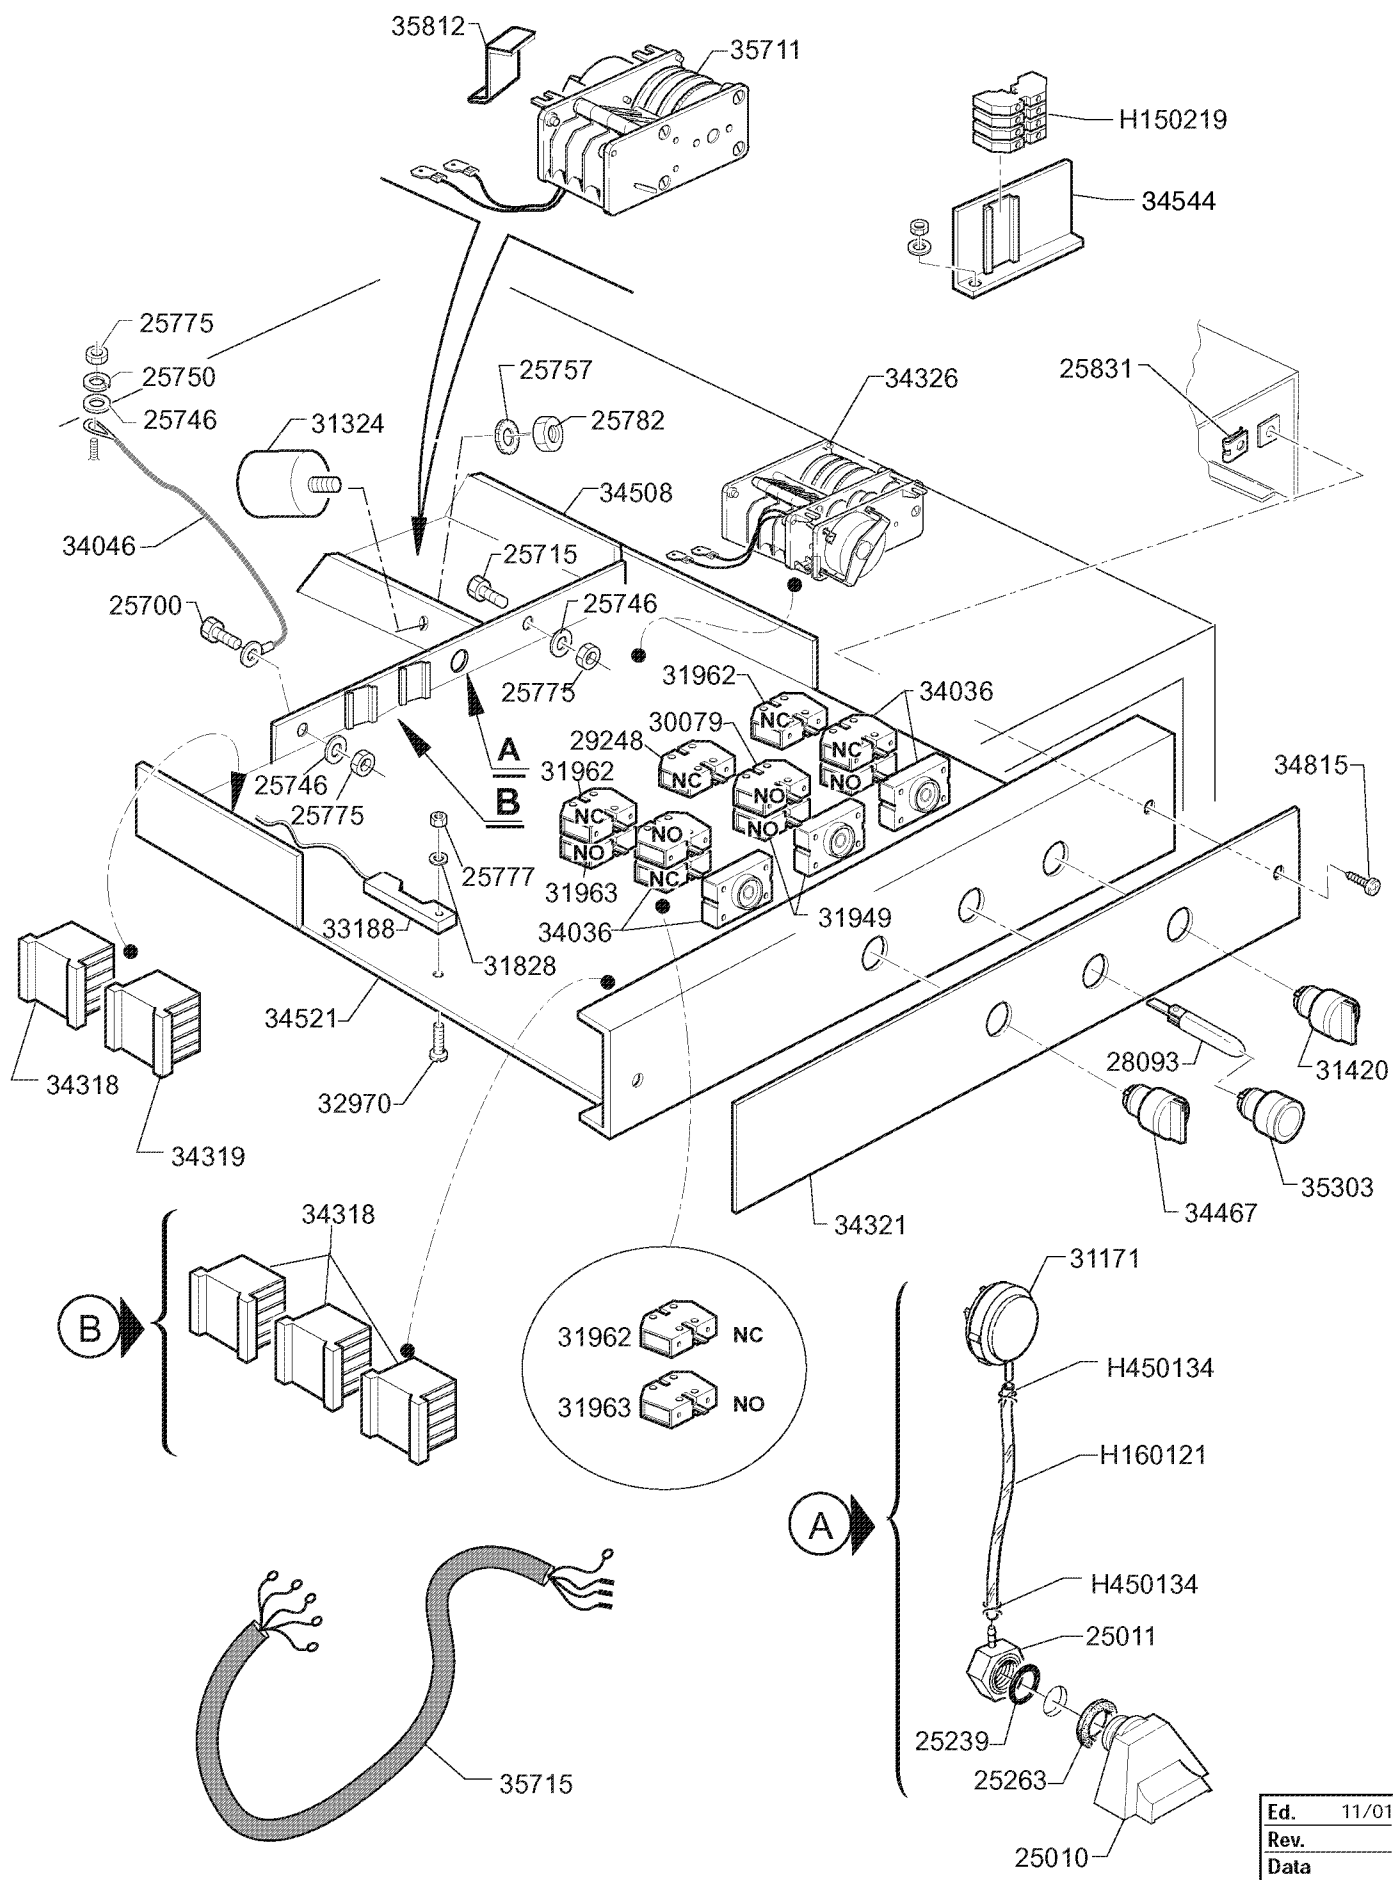


Ed.	11/01
Rev.	
Data	

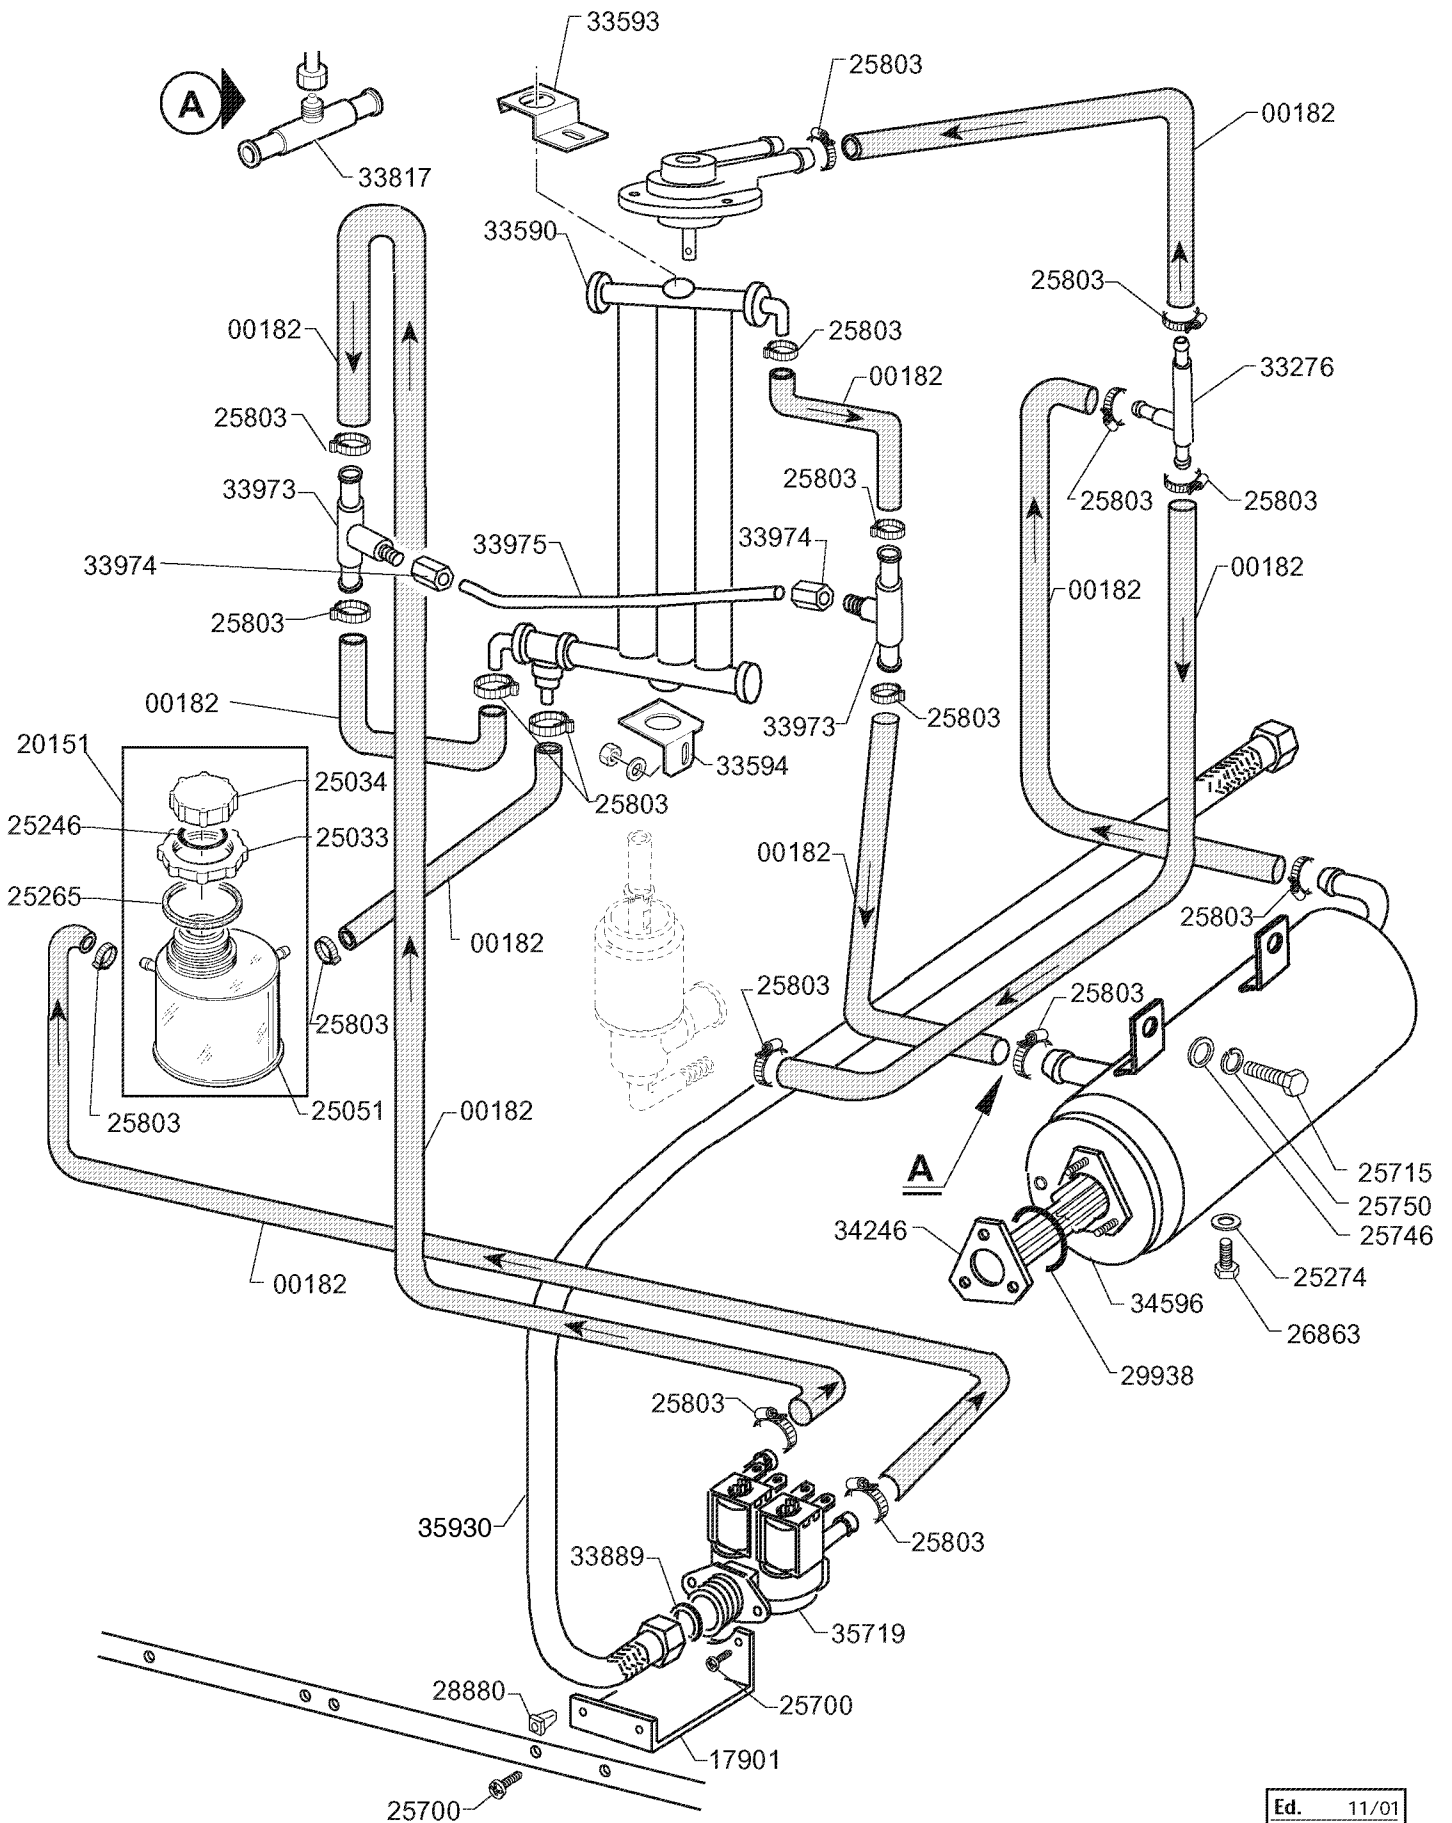


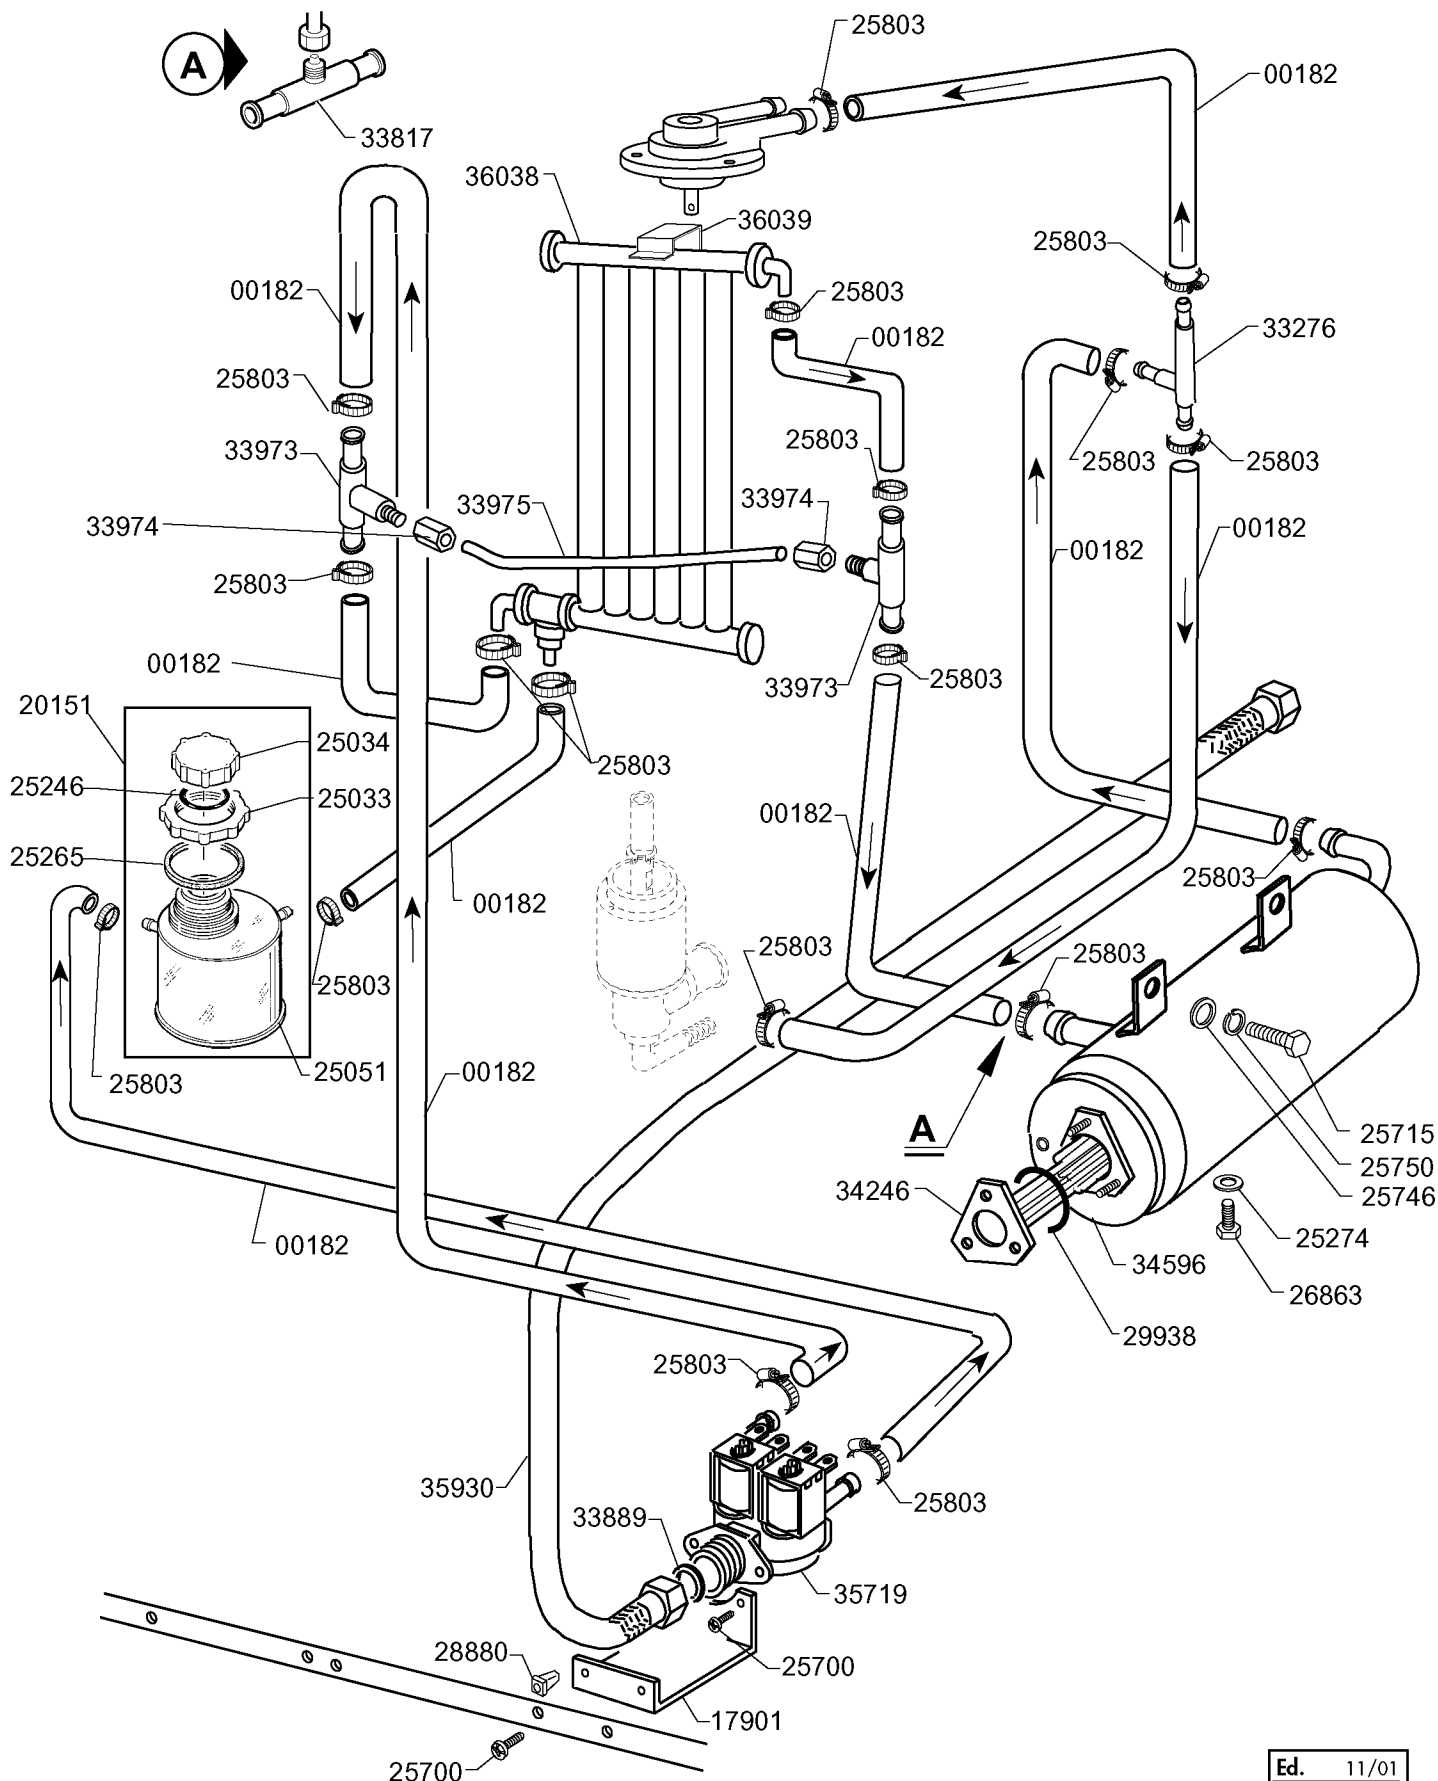


Ed.	11/01
Rev.	
Data	

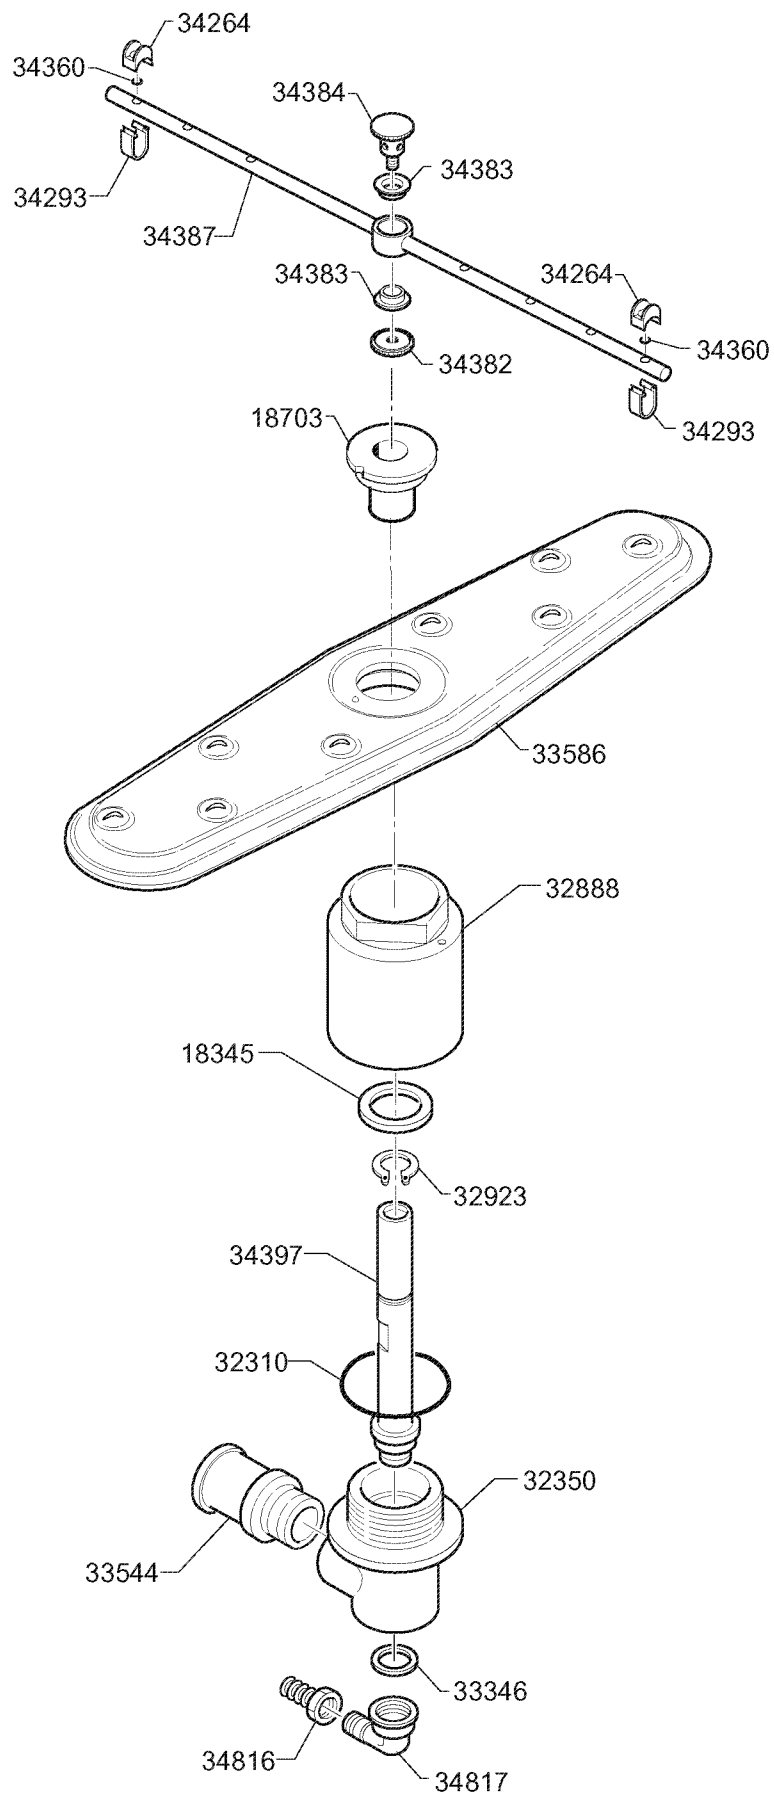


Ed.	11/01
Rev.	
Data	


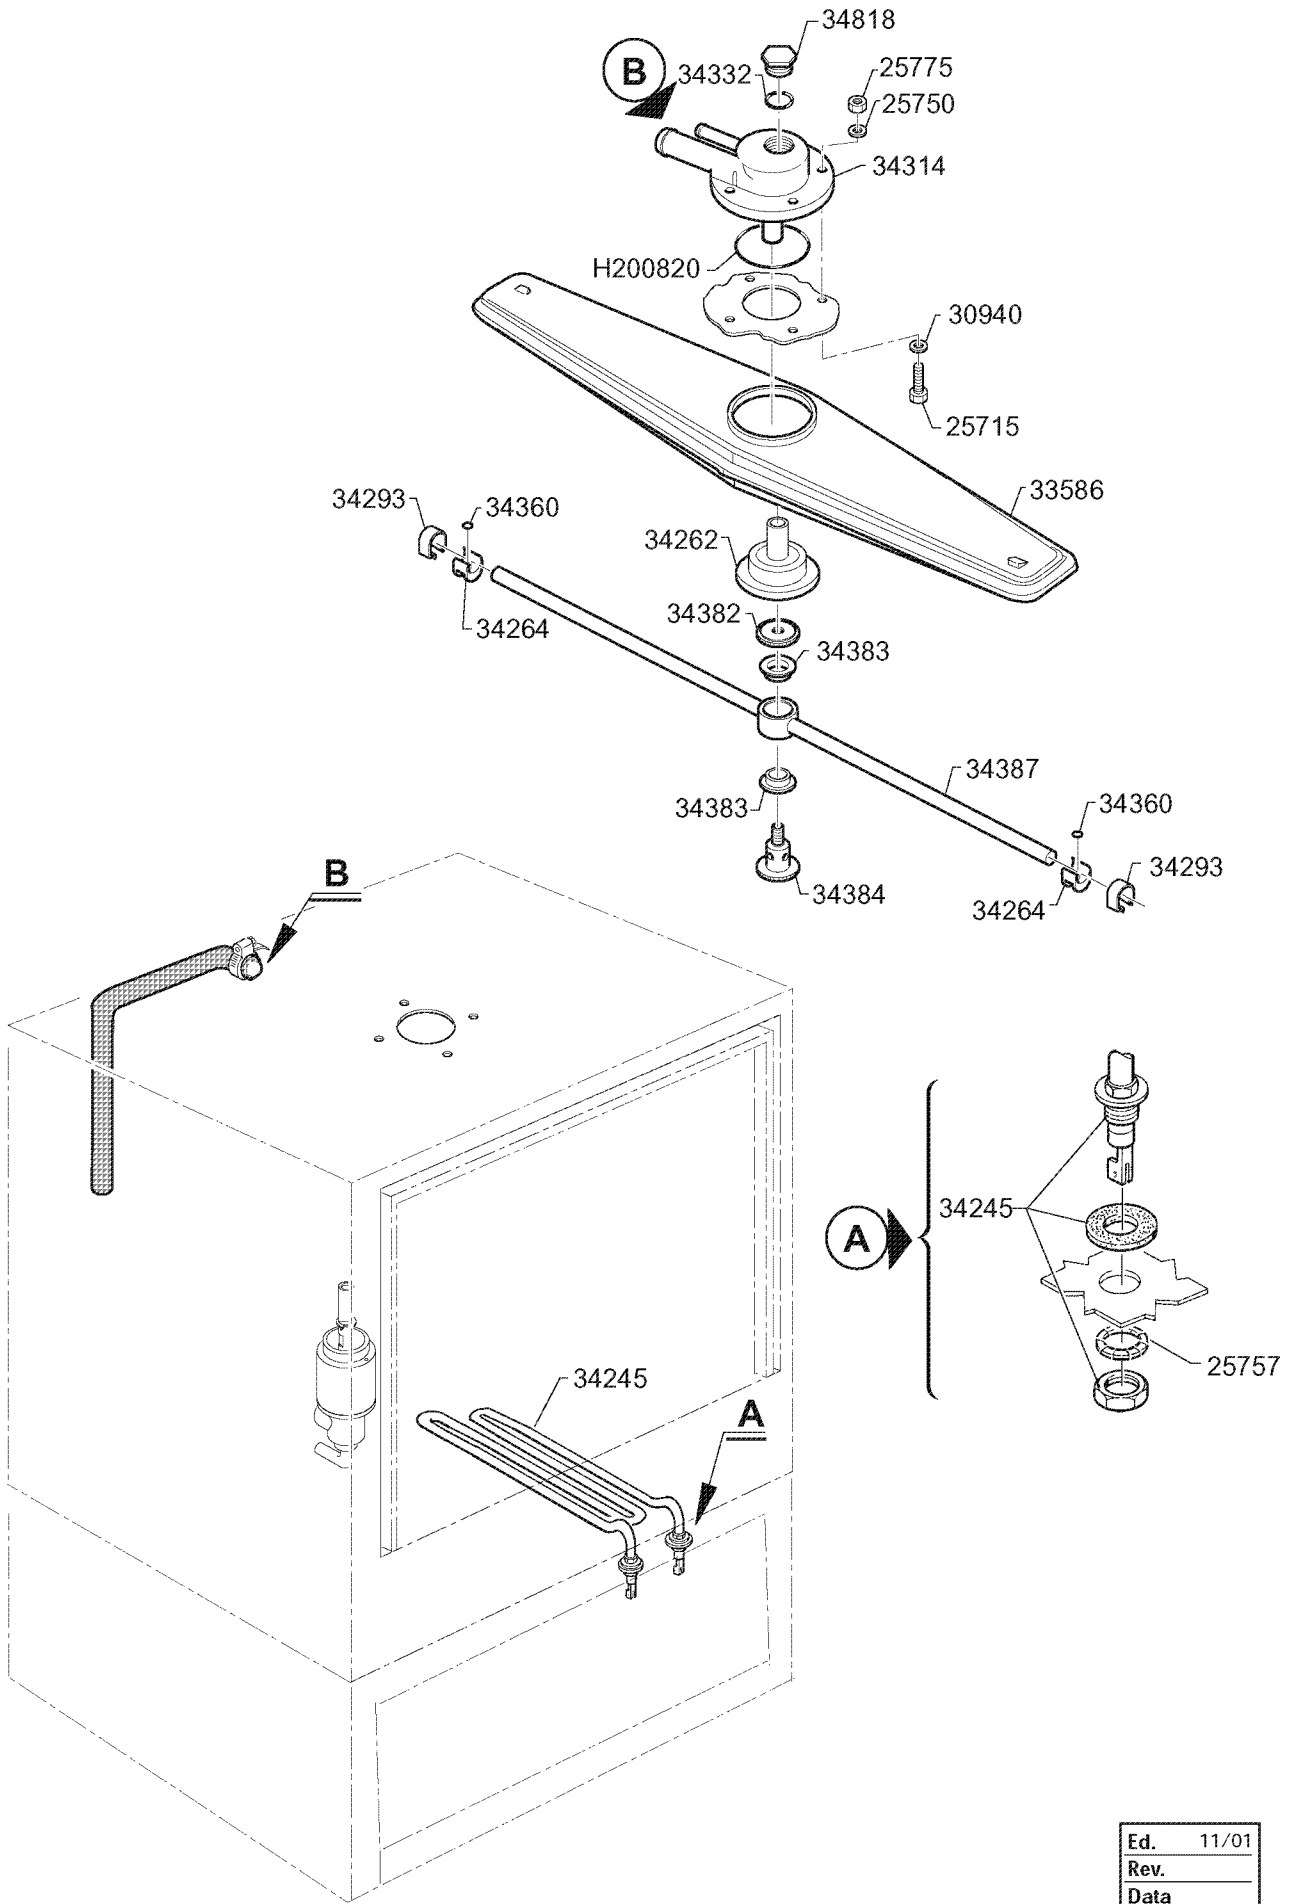


Ed.	11/01
Rev.	
Data	

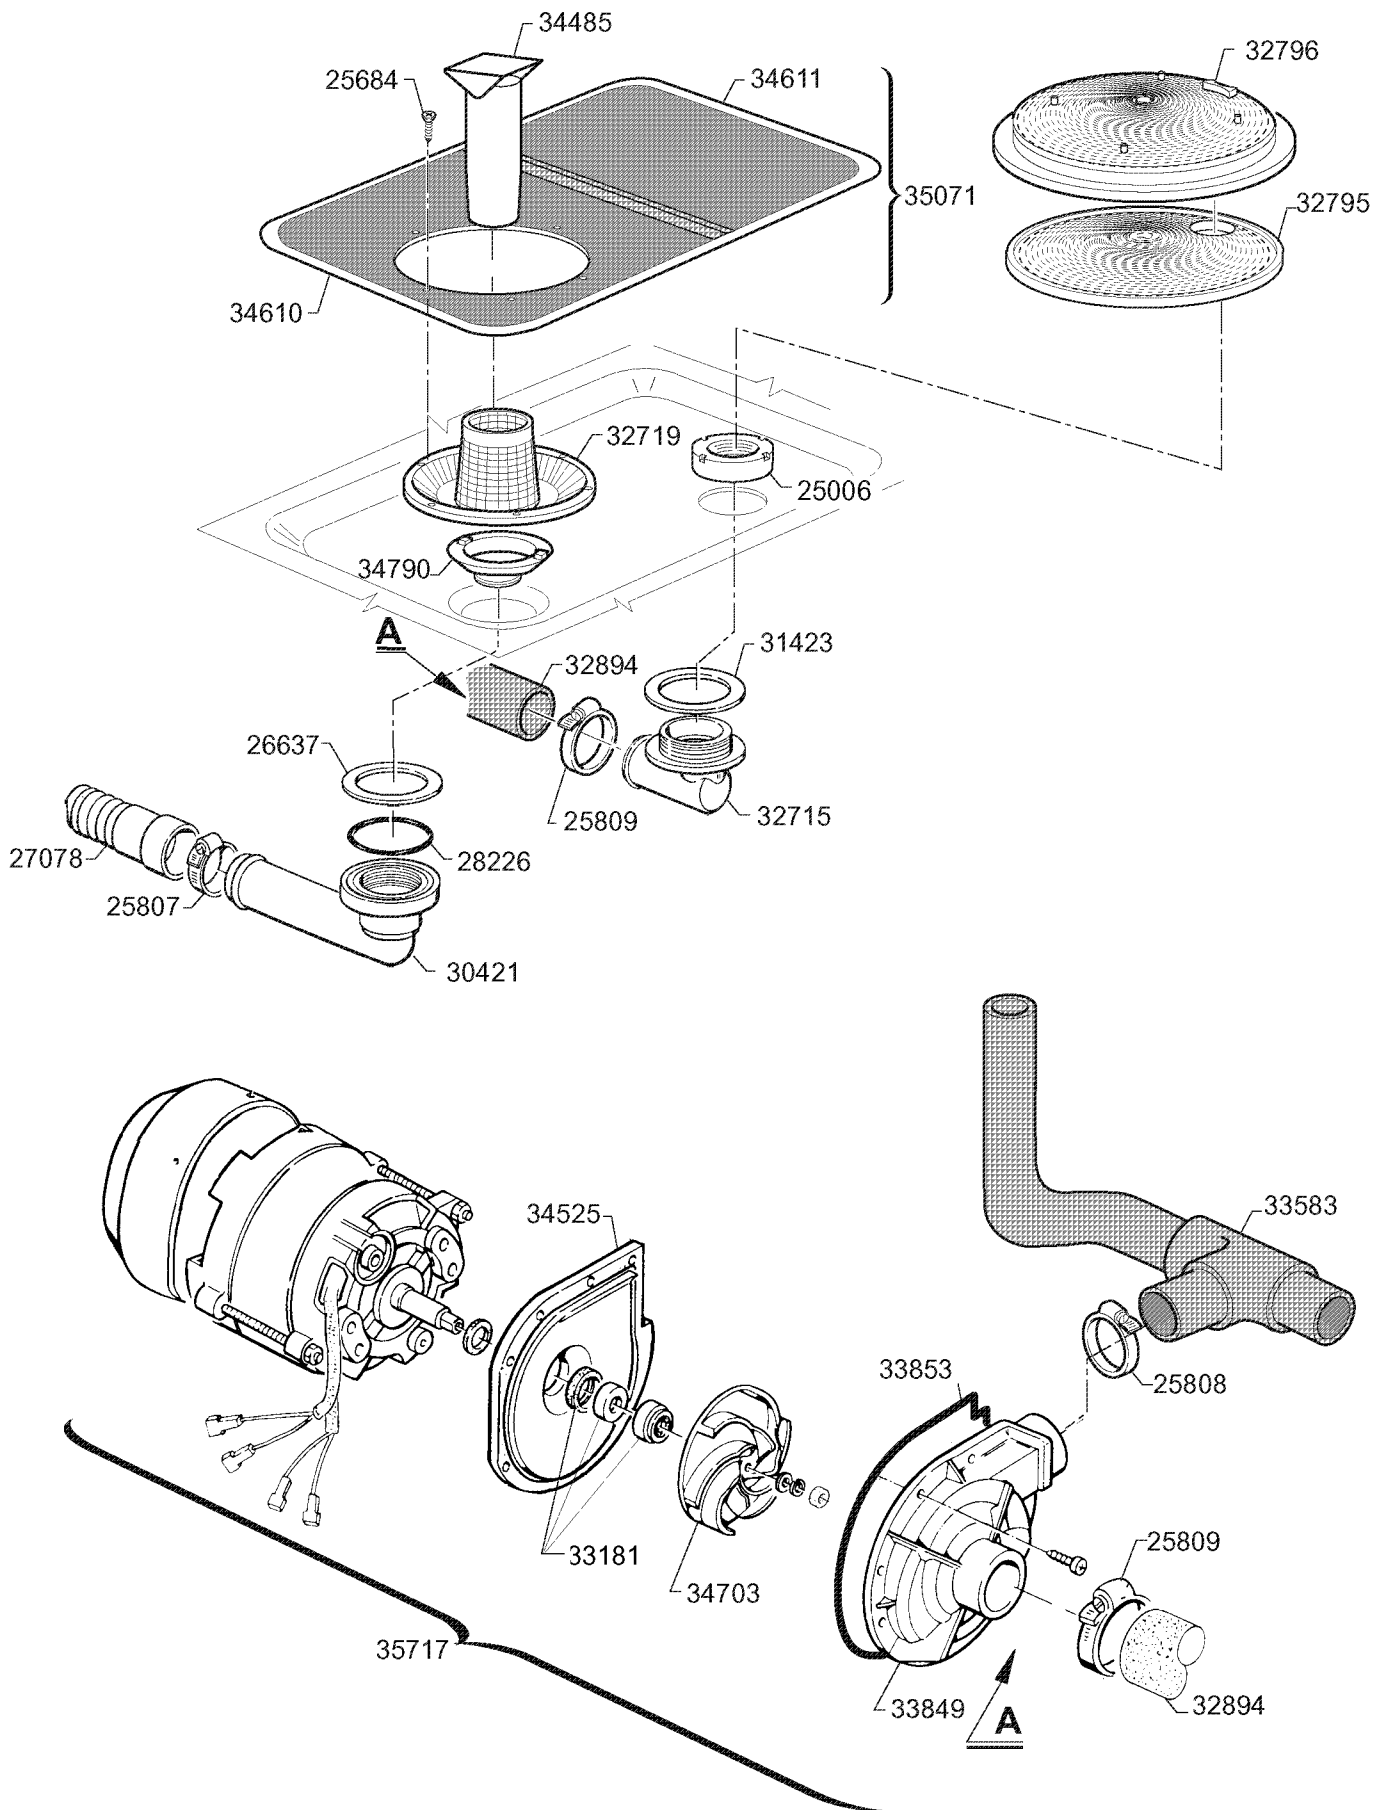

Ed.	11/01
Rev.	
Data	

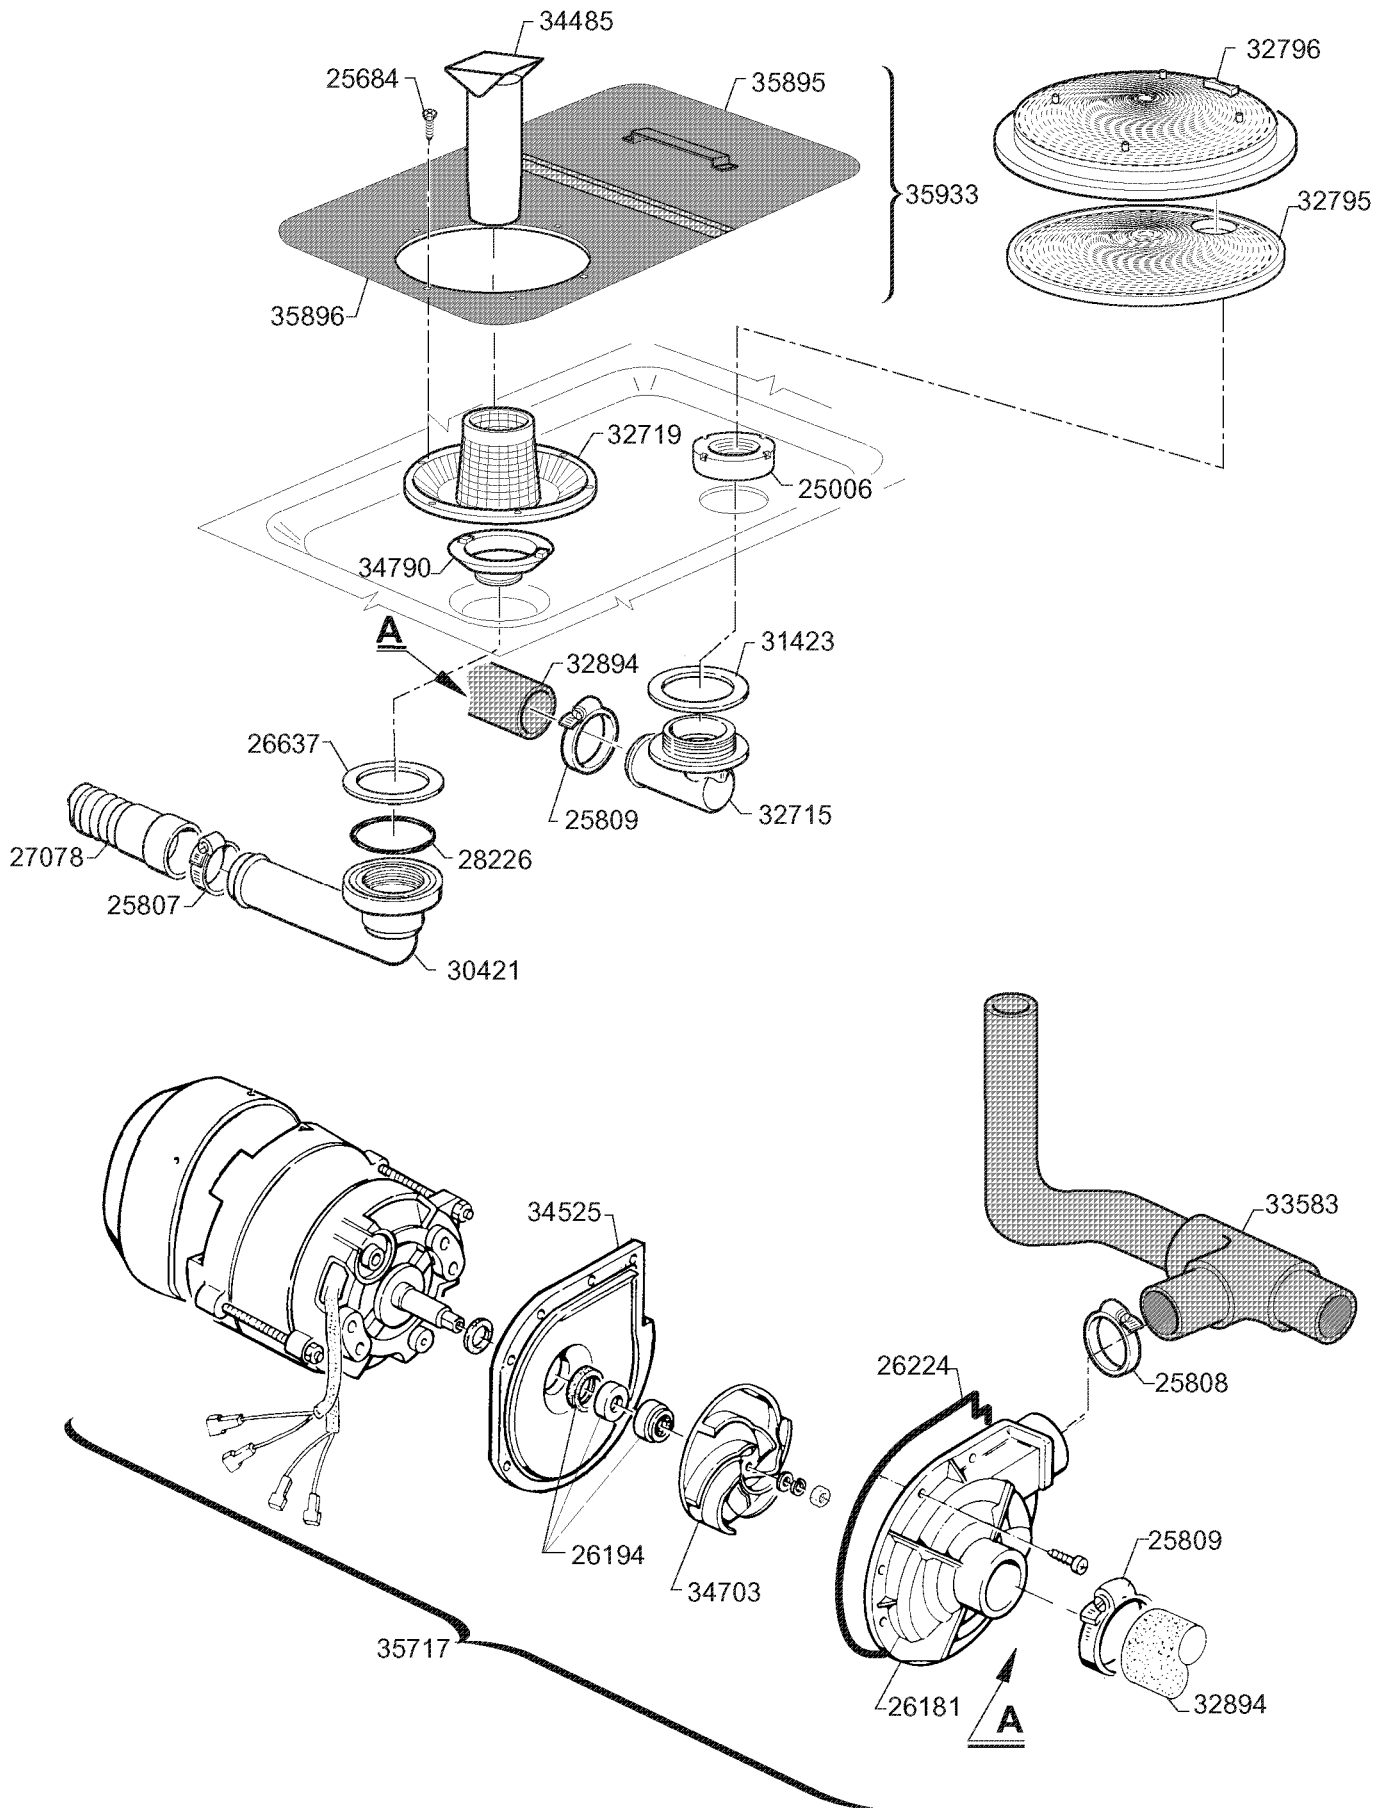

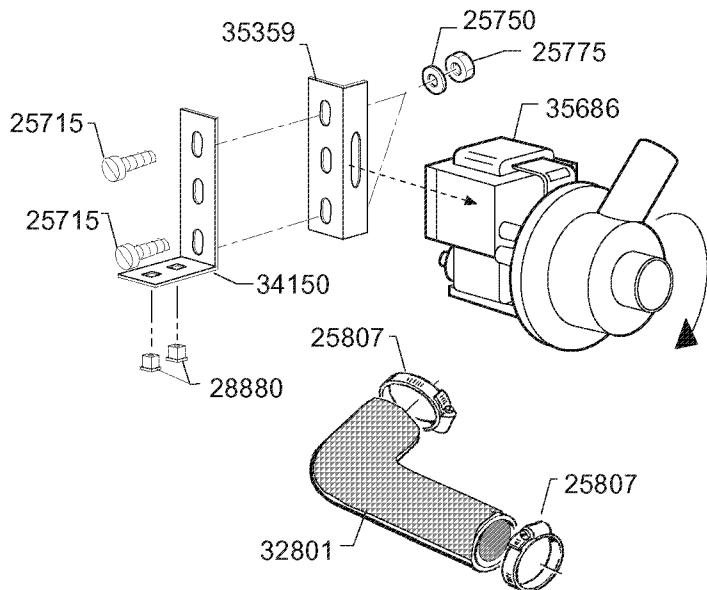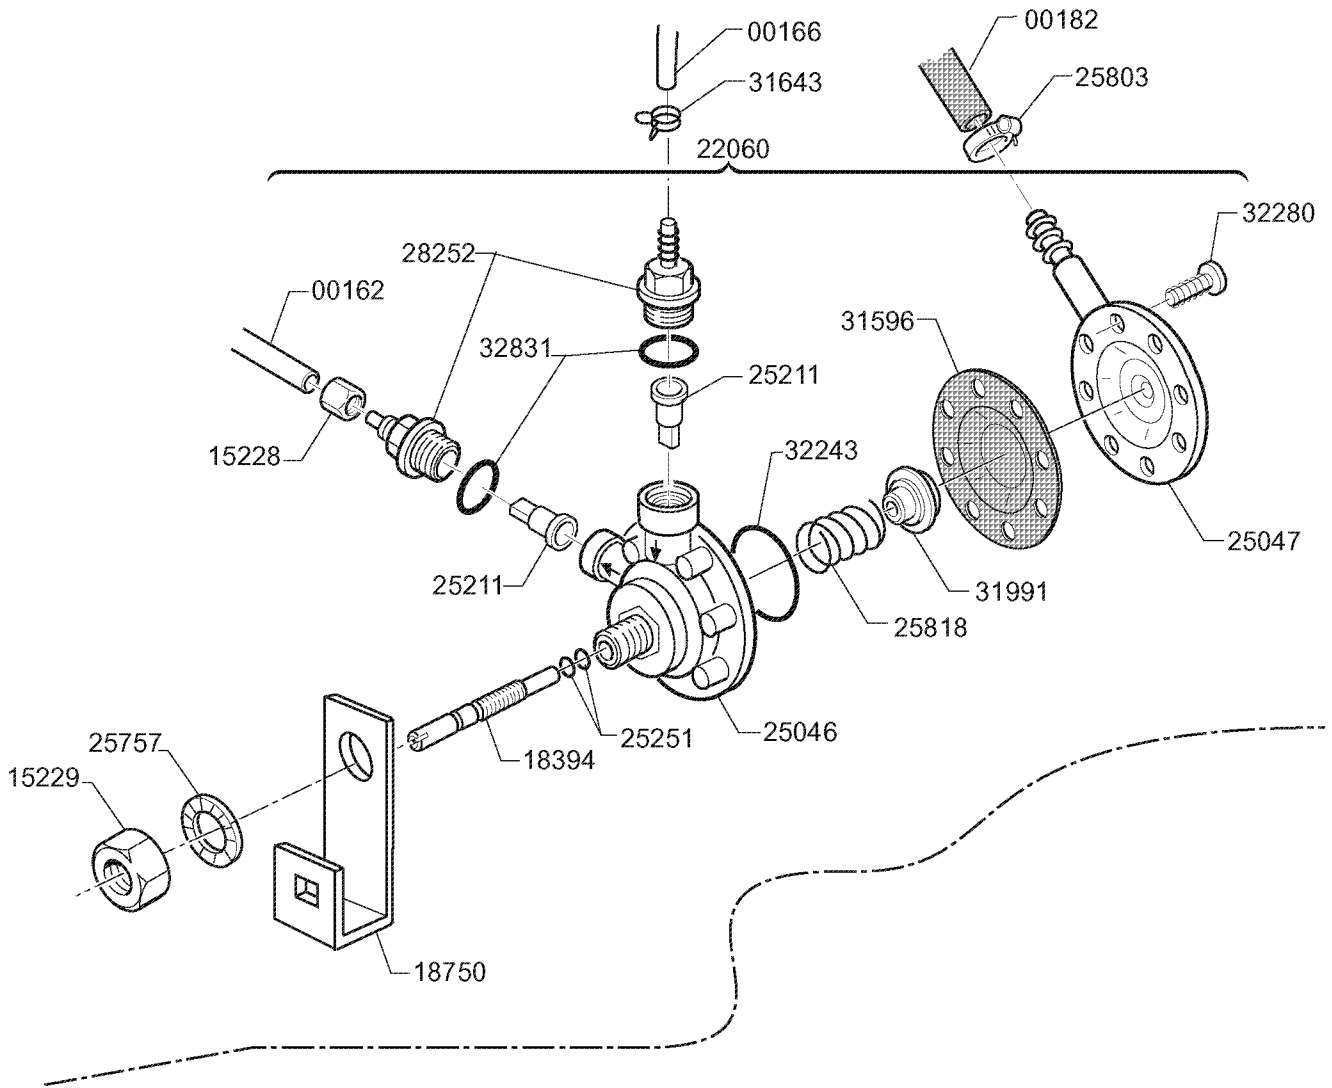

Ed.	11/01
Rev.	
Data	